




Ready To Go
SimpleSpec 600.06™

Installation Manual




For more information, please visit 3-form.com or call 800.726.0126
FEBRUARY 2019 | MAN-RTG-600-06 | REV 003 © 2019 3form, Inc. All rights reserved.


Contents Overview

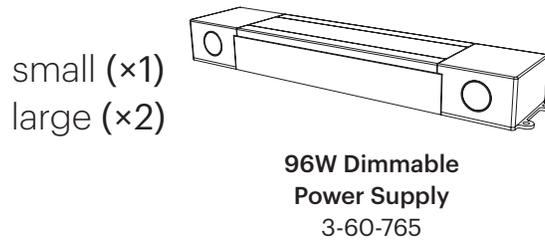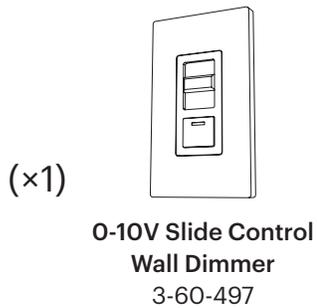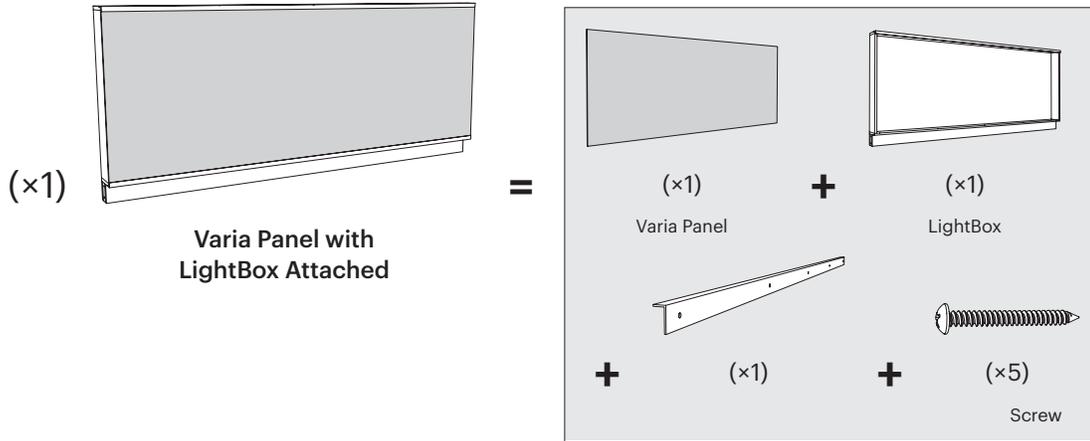


Required Tools

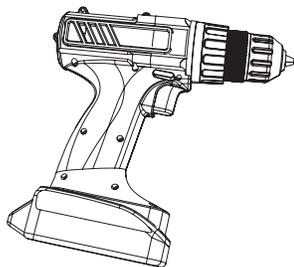

Drill



Level

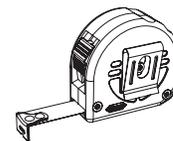



Measuring Tape



Screws



Overview

Small

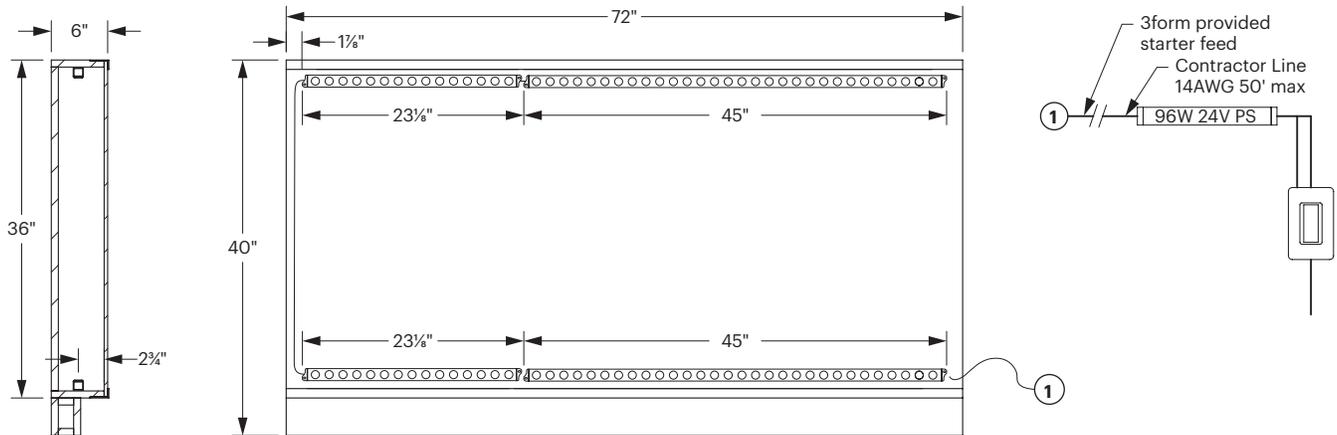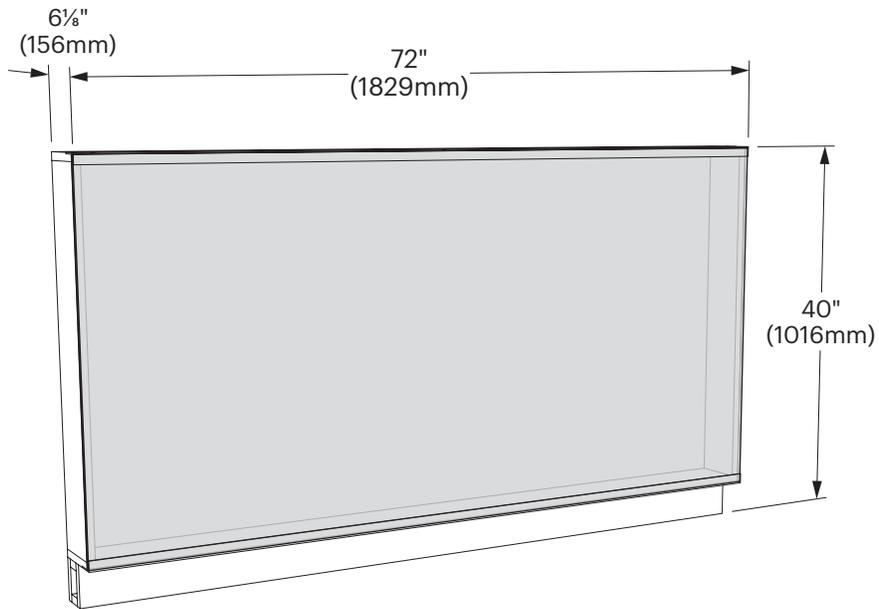

Overview

Large

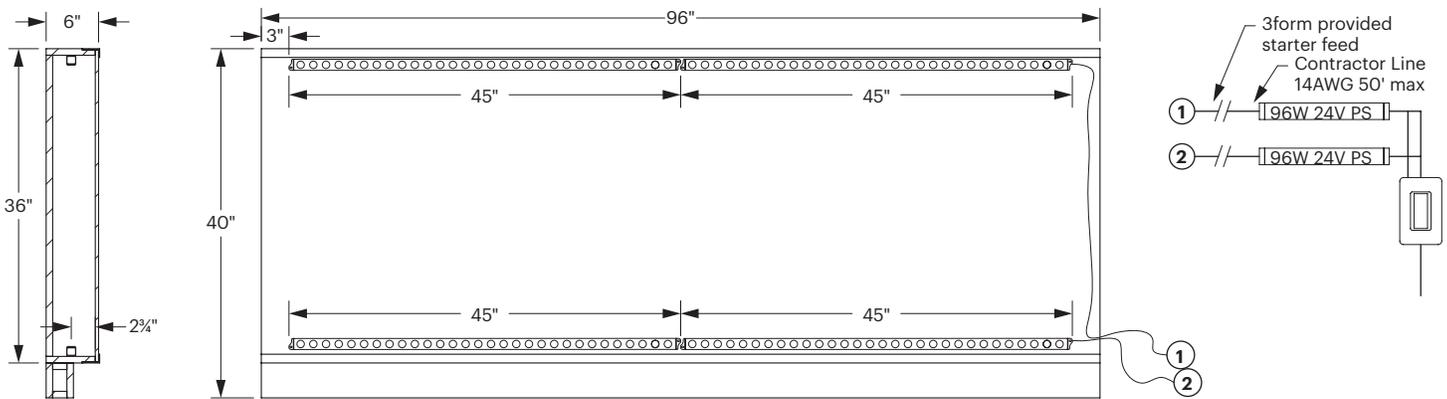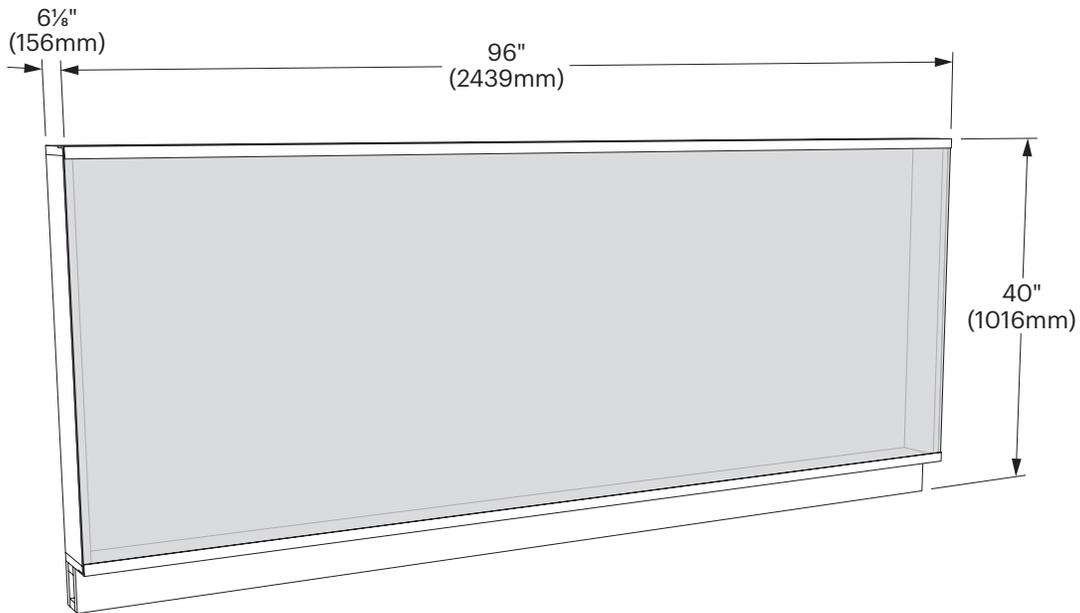


Installation


1 Prepare to Install

a 600.06 come fully assembled and ready to mount inside your reception desk or feature.

b Remove 3form decorative panel by unscrewing and removing the bottom angle bracket. This will allow the panel to slide out toward the bottom.

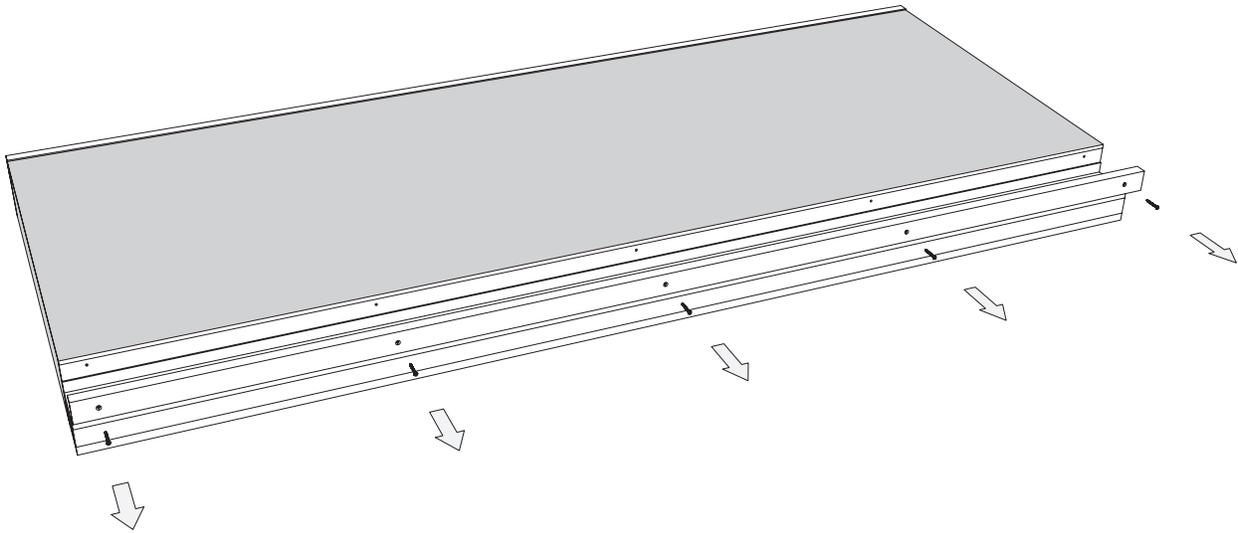


c

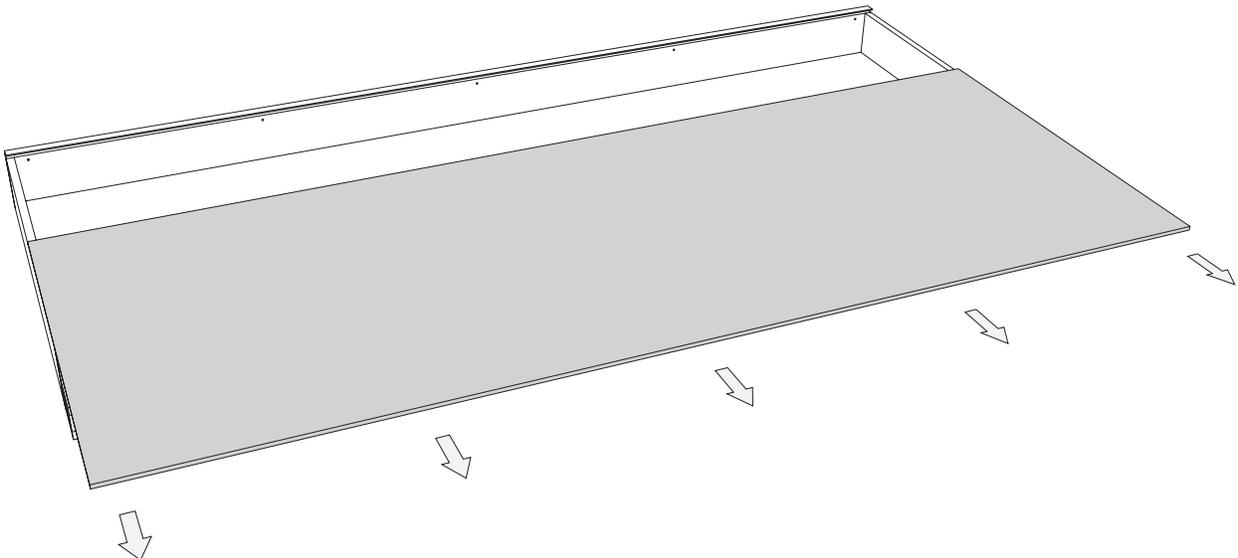

Installation

2 Mount to Desk

Mount the 3form reflective box to the desk through the back reflective panel with screws or bolts.

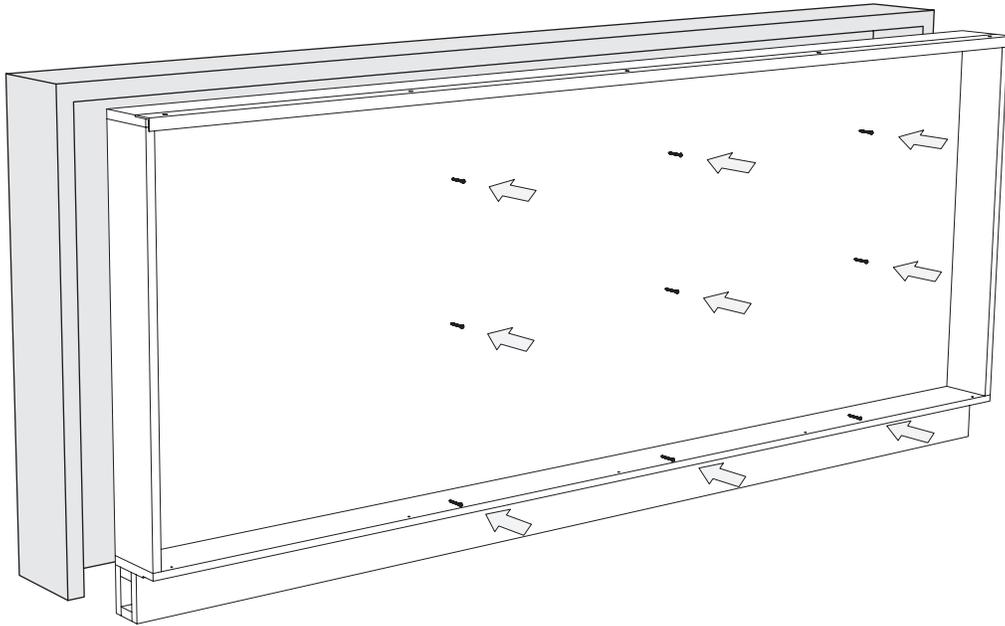


Installation

3 Connect Electrical

Have a qualified electrician wire up the low voltage wires to the LED drivers and test lighting.

a Wiring Diagram for Small 600.06

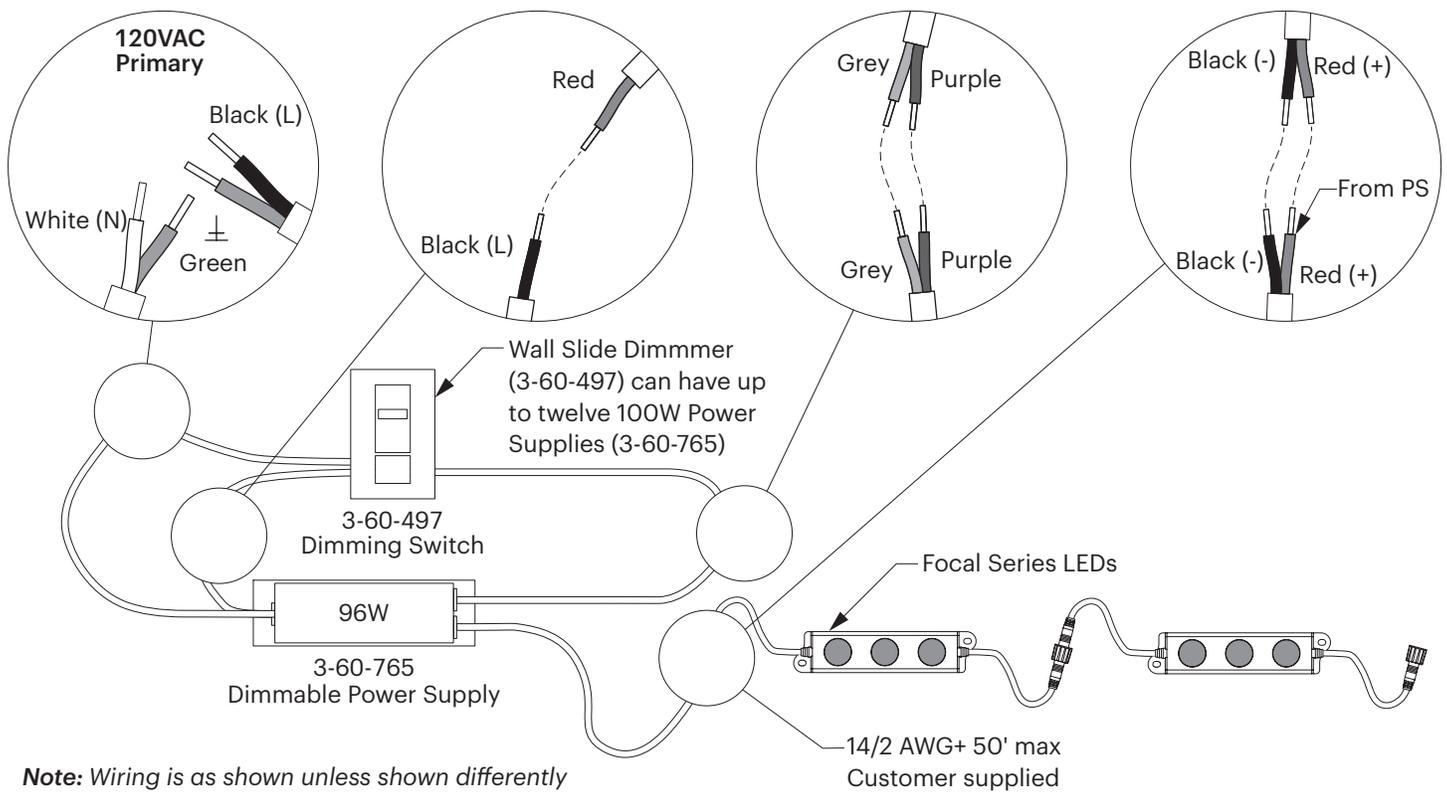


Note: Wiring is as shown unless shown differently on 3form Lighting Layout Drawing

Installation

3 Connect Electrical cont...


b Wiring Diagram for Large 600.06

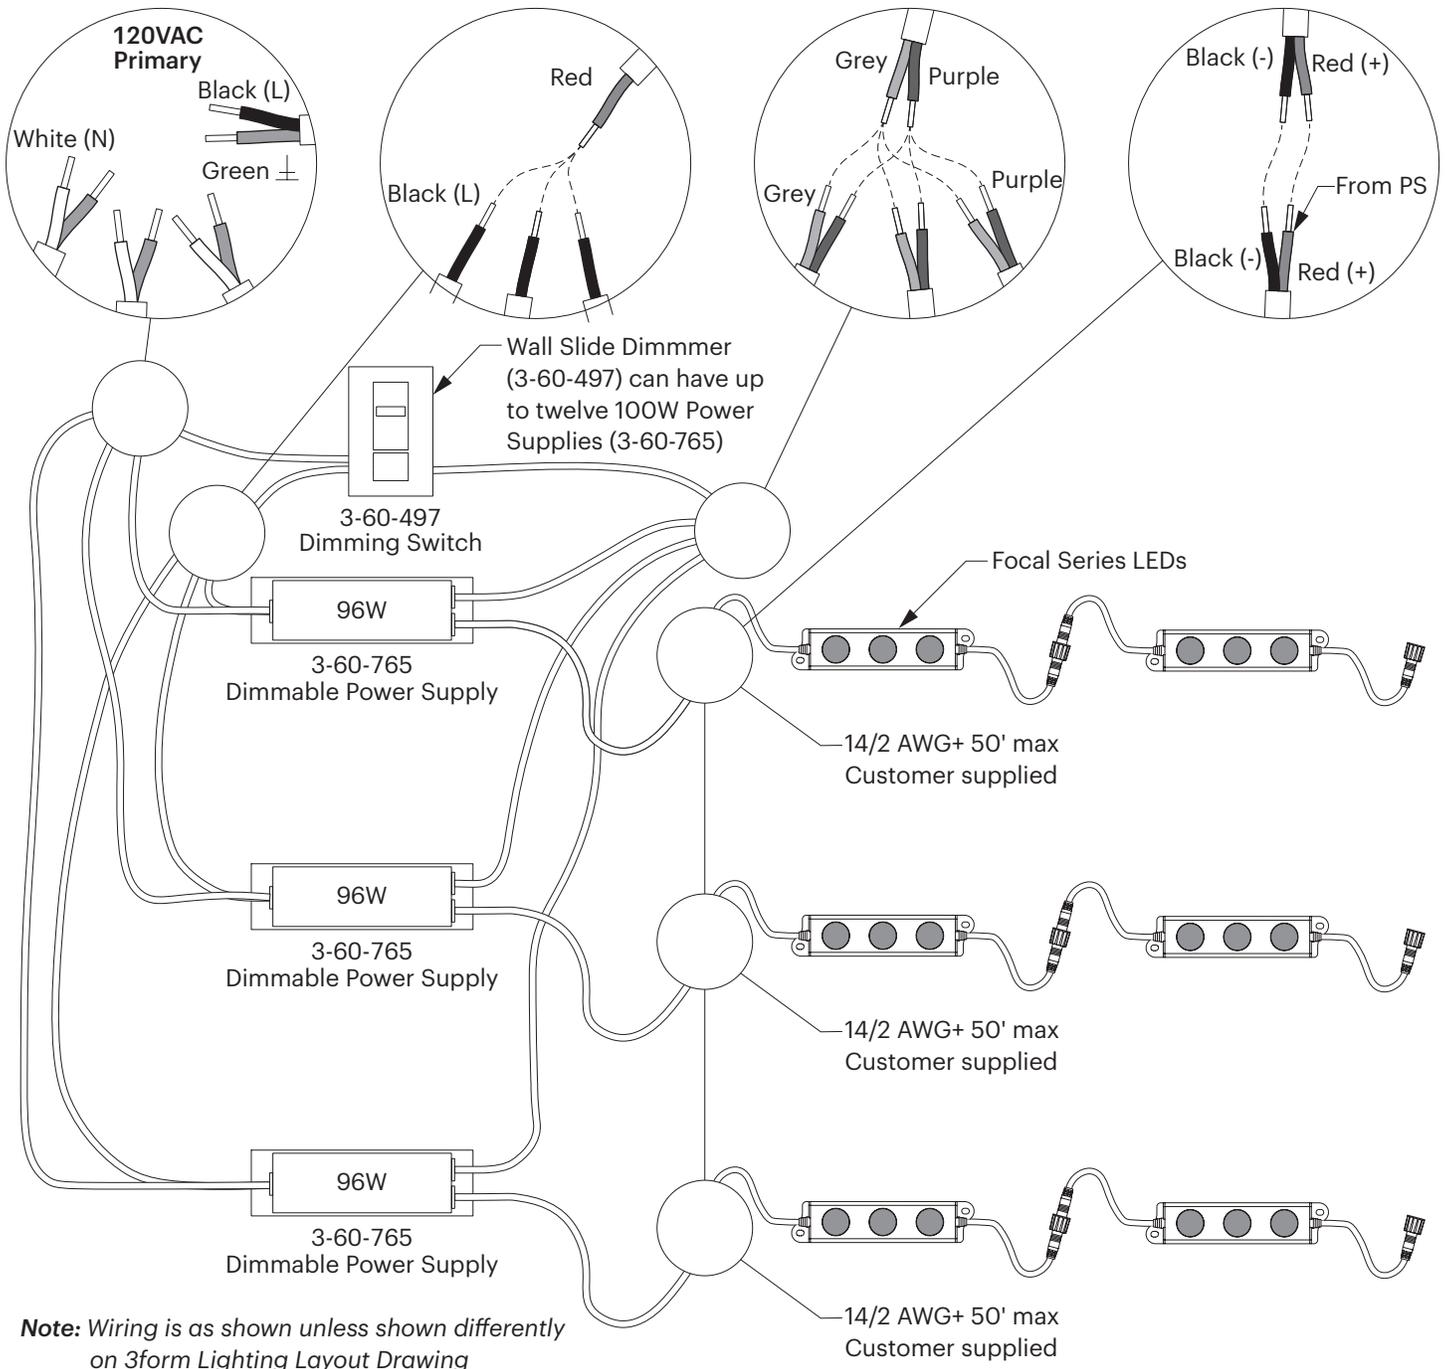


Installation

4 Reinsert the Panel

- a** Slide the 3form panel back into the upper brackets.

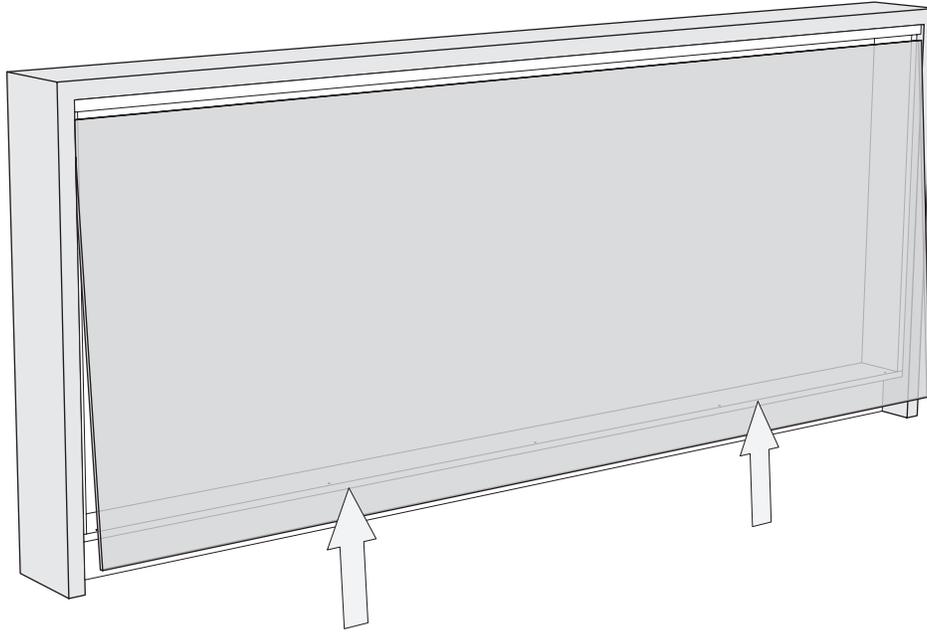

- b** Replace the bottom angle bracket and screws to hold panel in place.

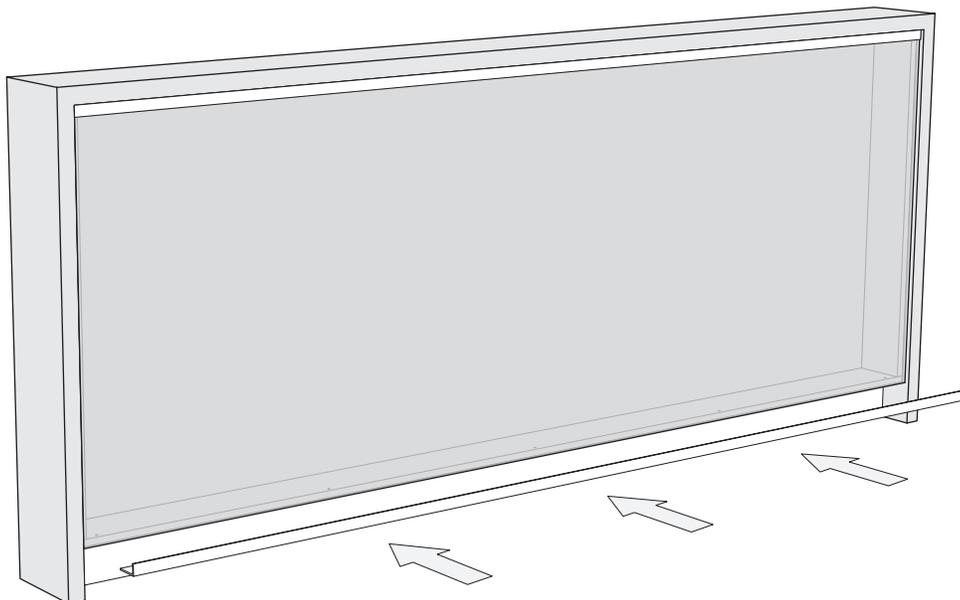

Installation

4 Reinsert the Panel cont...

- C** Toe kick area does not come finished and must be covered on site by installer to match toe kick spec from Architect.

