



Divide
SimpleSpec 200.104™





| Installation
Manual

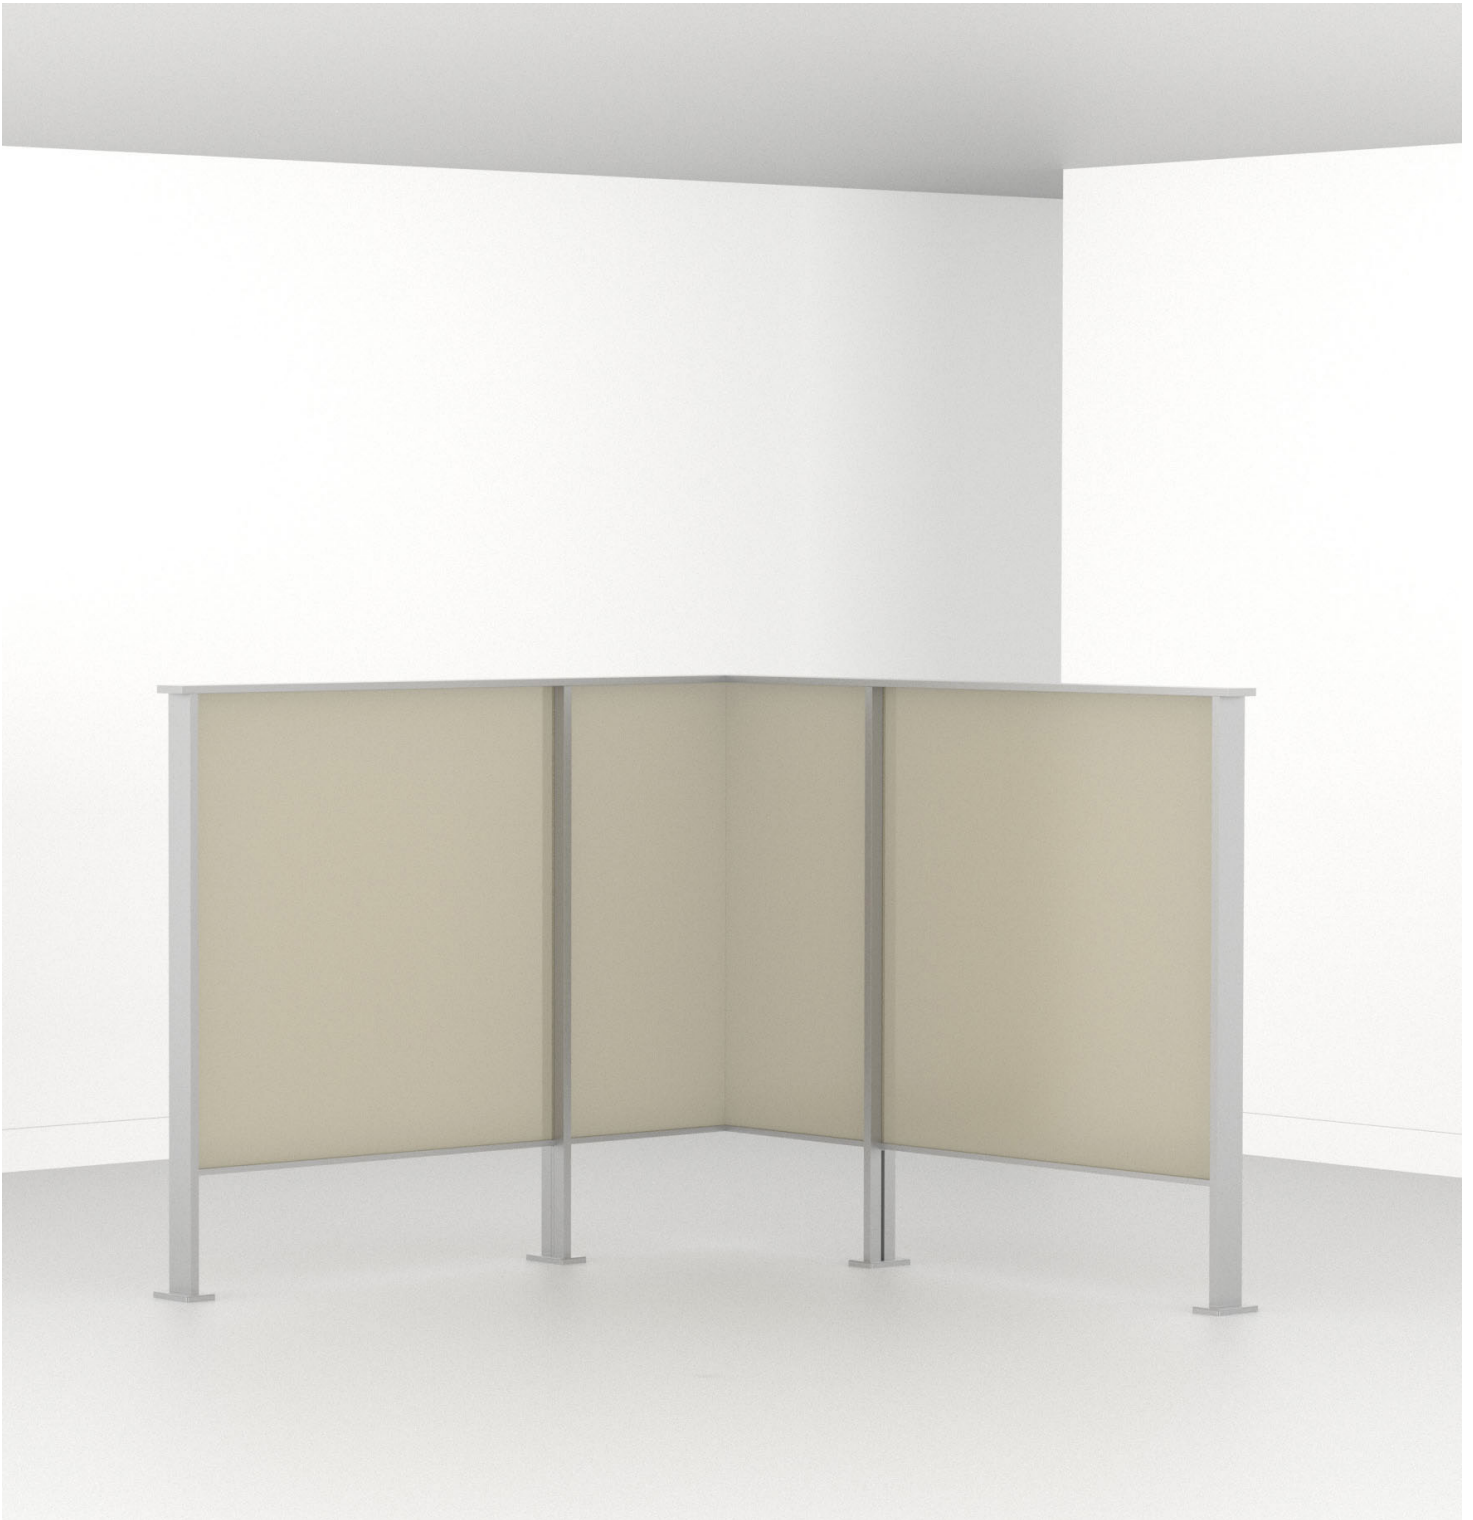

Contents Overview

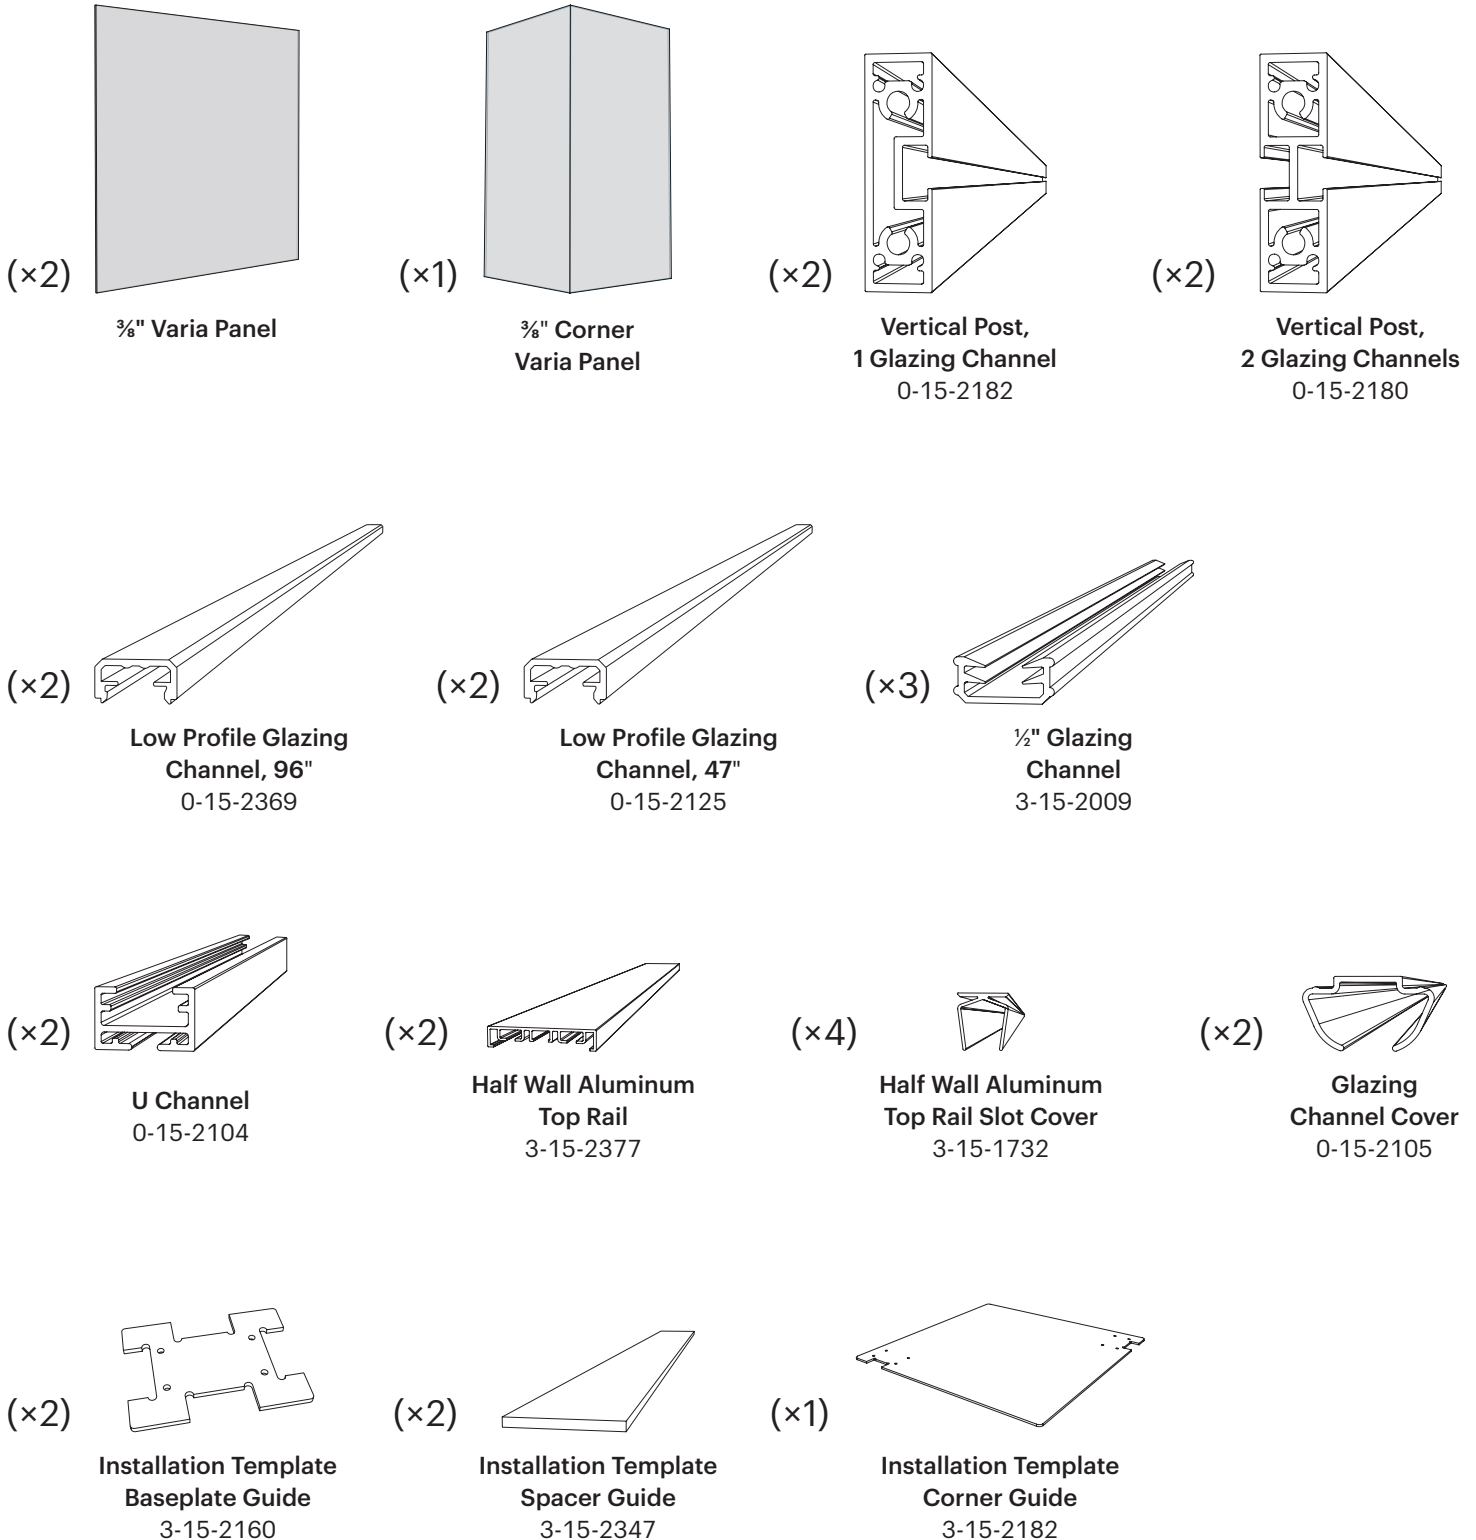


Contents Overview

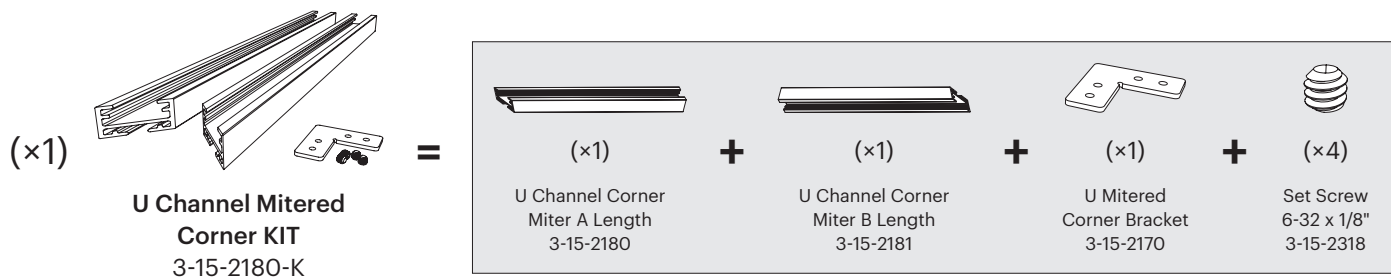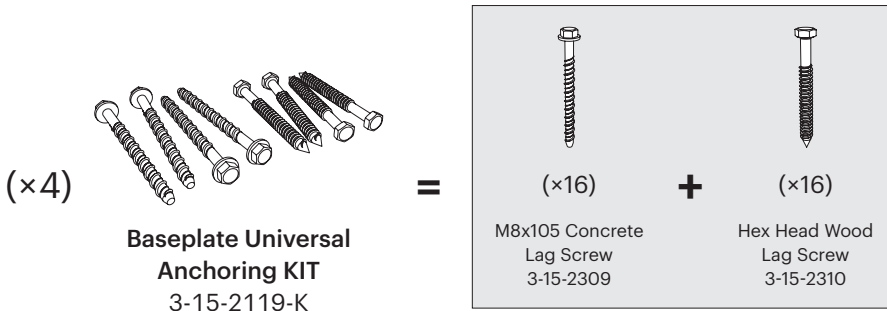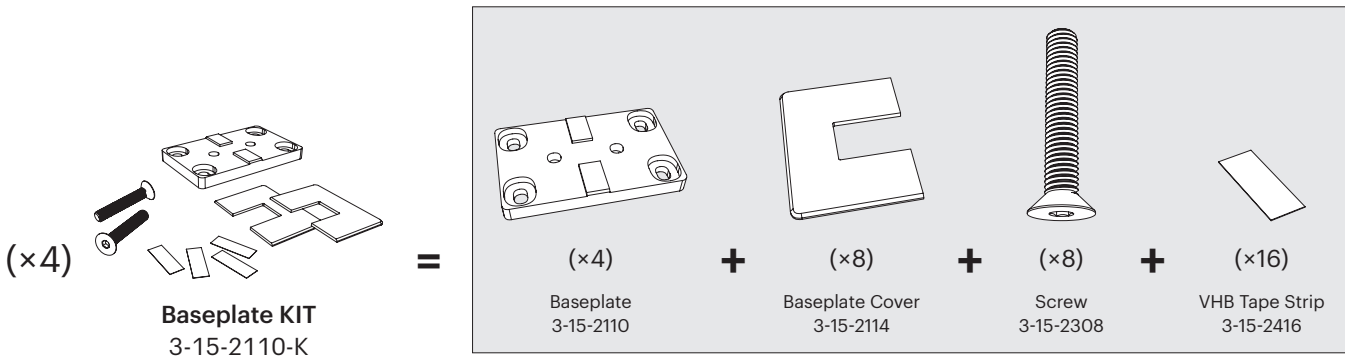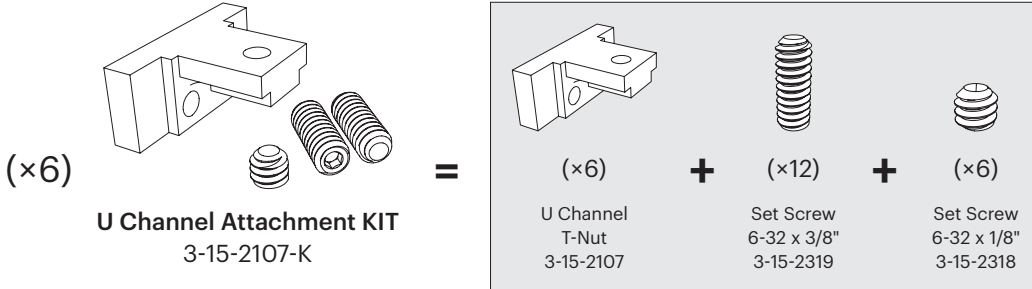


Contents Overview


(×2)

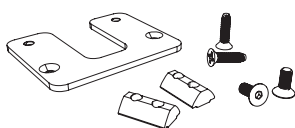



=

	(×2)	+		(×4)	+		(×4)	+		(×4)
Half Wall Aluminum Top Rail, End Adapter Plate	3-15-2380		M5 T-Nut	3-15-2391		M5 × 12mm Screw	3-15-2392		Self Tapping Screw	3-15-2338


(×2)

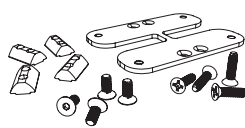



=

	(×2)	+		(×8)	+		(×8)	+		(×8)
Half Wall Aluminum Top Rail, Center Adapter Plate	3-15-2381		M5 T-Nut	3-15-2391		M5 × 12mm Screw	3-15-2392		Self Tapping Screw	3-15-2338


(×1)

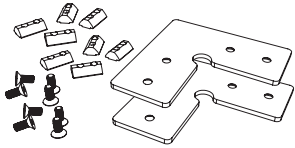


=

	(×2)	+		(×8)	+		(×8)
Half Wall Aluminum Top Rail Mitered Bracket	3-15-2384		M5 T-Nut	3-15-2391		M5 × 12mm Screw	3-15-2392


(×2)

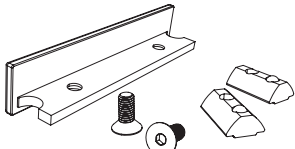

=

	(×2)	+		(×4)	+		(×4)
Half Wall Aluminum End Cap	3-15-2305		M5 T-Nut	3-15-2391		M5 × 12mm Screw	3-15-2392

Overview - Divide Partition 6'x6' Corner

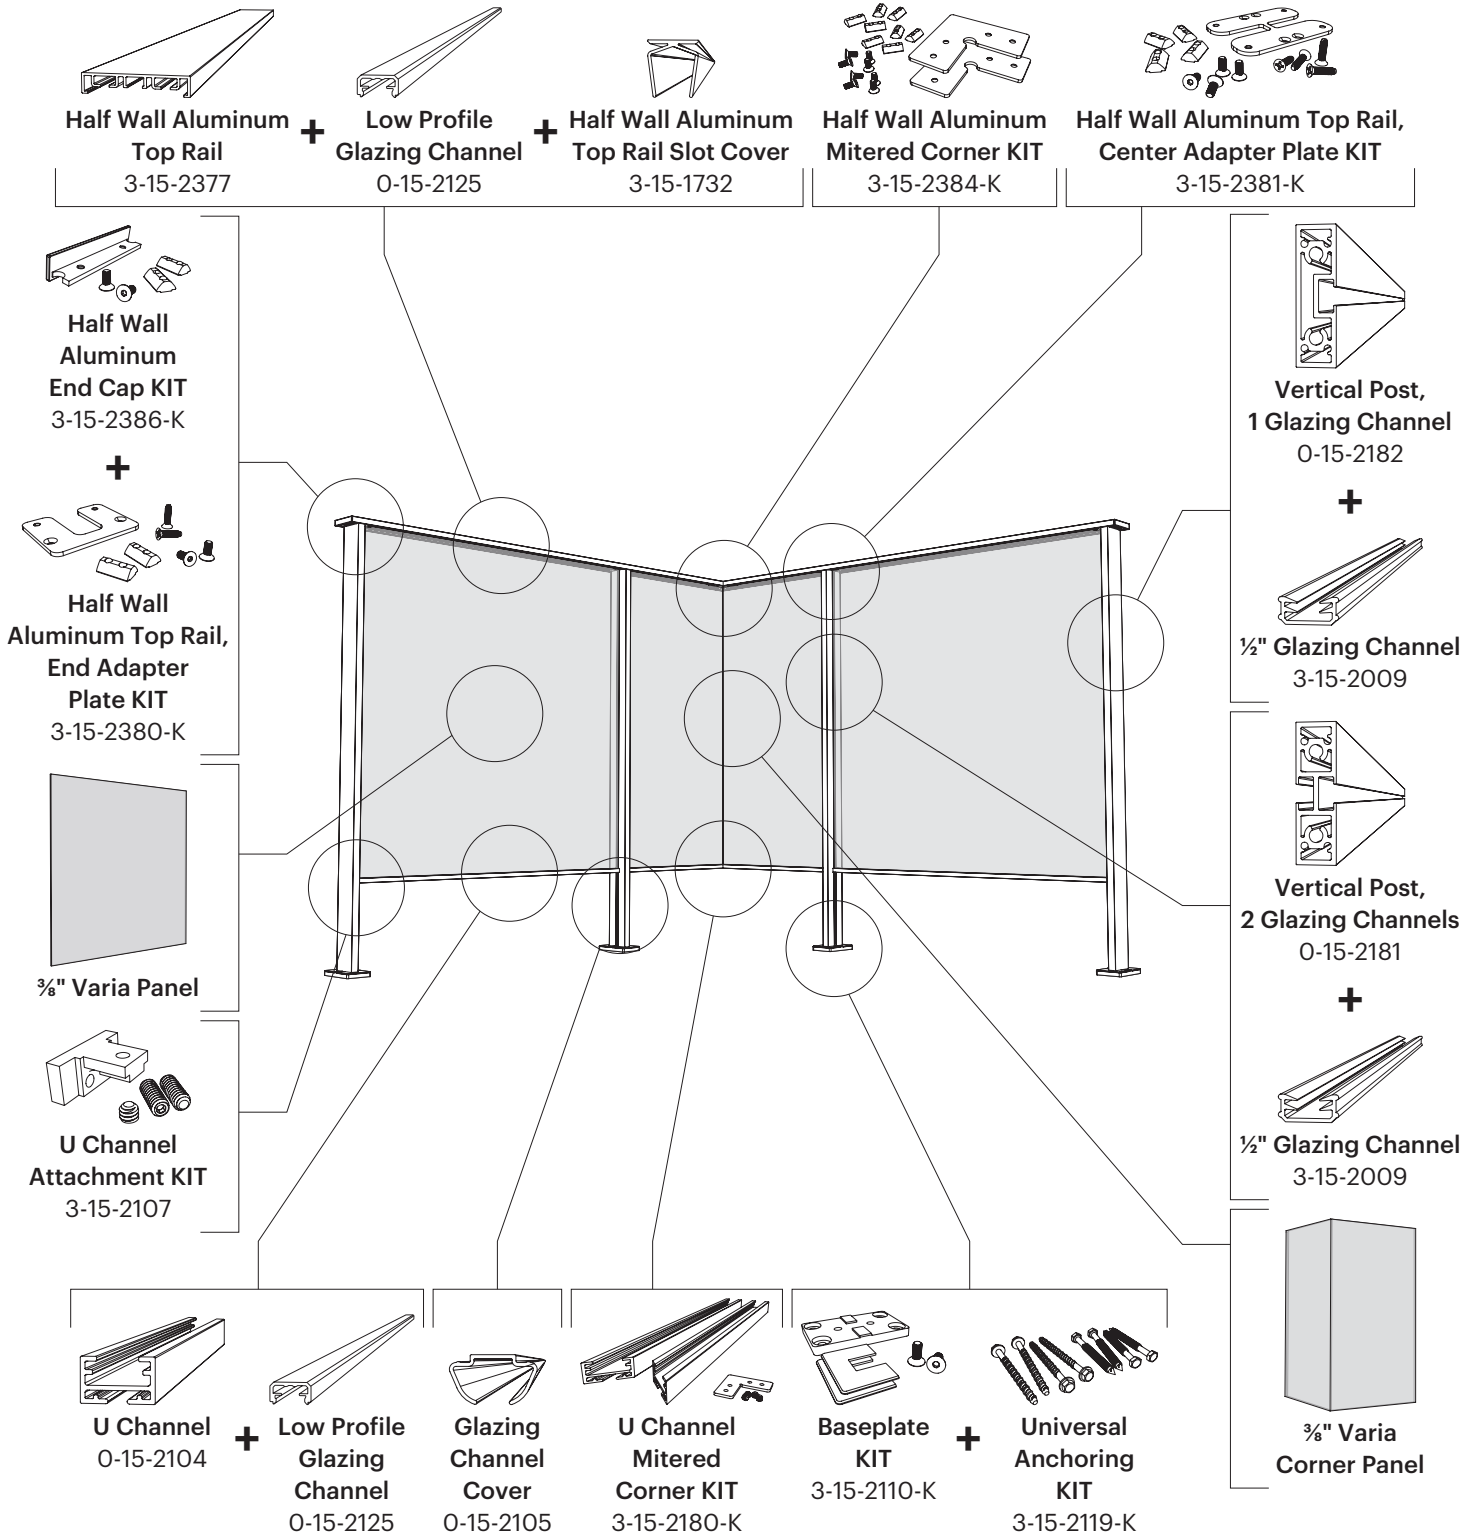


Overview - Accessory Options


Divide Partition Systems also accommodate a number of accessory options to customize the use for your application. Contact your 3form Elements Dealer for additional information.

Markerboard and Markerboard Shelf


Post to Post

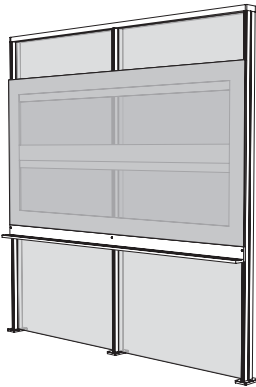


Inset on Hush Mount

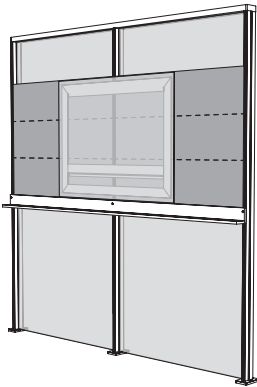


Accessory Shelf

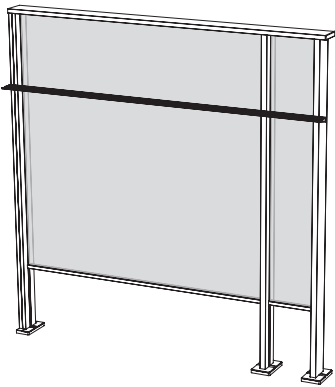

Hush Mount

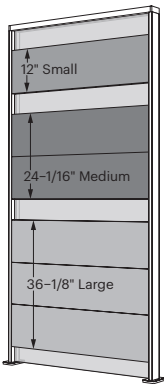


TV Mount

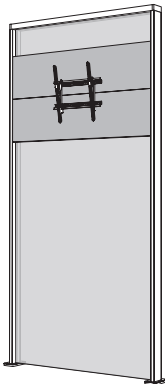


Coat Hook


Post Attachment




Hush Mount Attachment

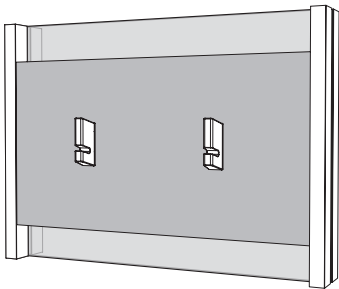

Hush Bar

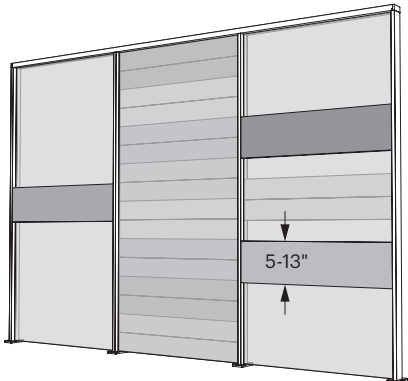


Shelves and Shelving Bracket

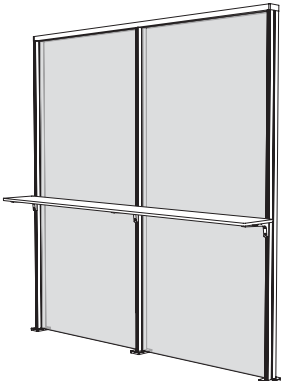


Installation

Required Tools

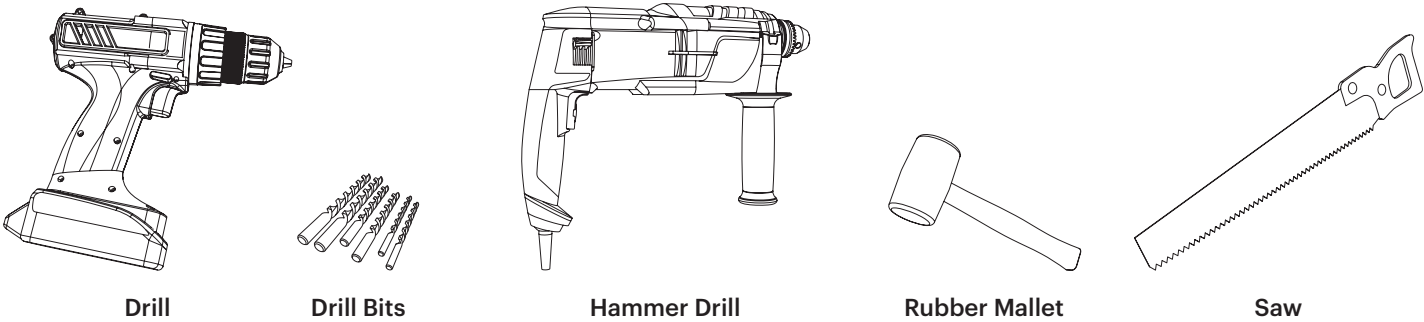

1 Drill Pilot Holes (×16)

- a** Baseplate templates (3-15-2160) and corner templates (3-15-2182) will be provided. The baseplate template has hole locations for drilling. Spacers will also be provided, unique to this configuration; cut to size based off post dimensions in the quoting phase.

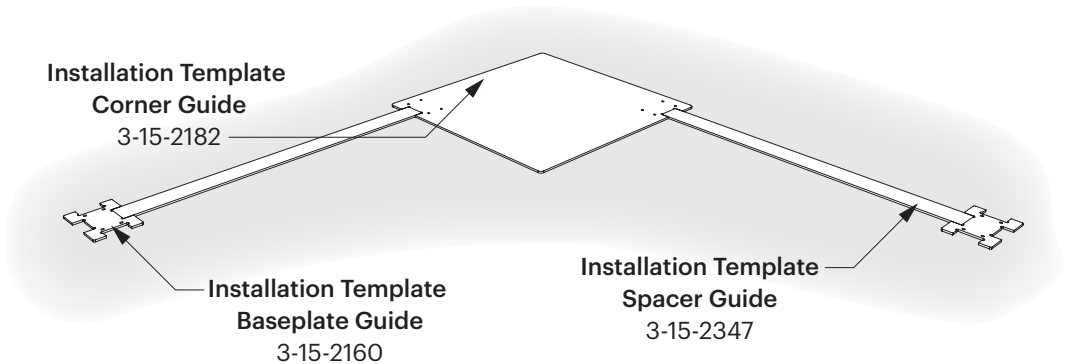

- b** Following the Installation Template, drill pilot holes. Use appropriate pilot hole diameter and depth for the type of substrate you are fastening to.


**3form stocks the drill bits required for the concrete and wood pilot holes. If you wish to purchase a drill bit, please contact your 3form sales representative.*

Substrate	Ø	Drill Bit	Depth	Anchors
Concrete	8mm	3-15-2350	min 4.3"	3-15-2309
Wood	3/16"	3-15-2335	min 3.5"	3-15-2310


Installation

2 Assemble Vertical Posts


- a** Cut Glazing Channel (3-15-2009) to 3' 11.125" lengths. (×6)

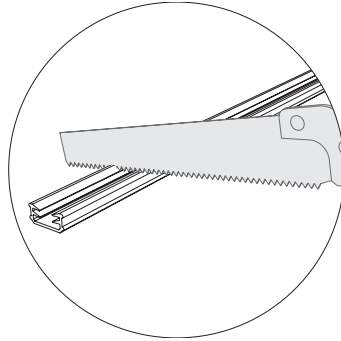


- Cut Glazing Slot Cover (0-15-2105) to 11.375" lengths. (×6)

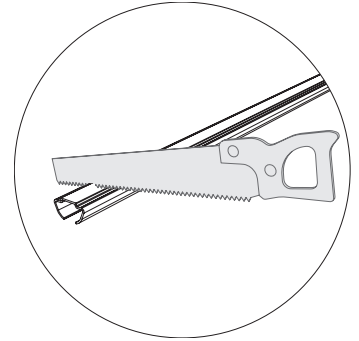


- b** Assemble Vertical Posts (0-15-2182). (×2)

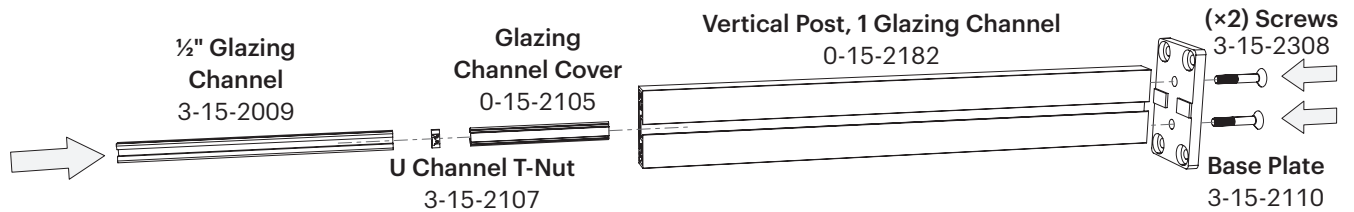

Assemble Vertical Post (0-15-2181). (×2)

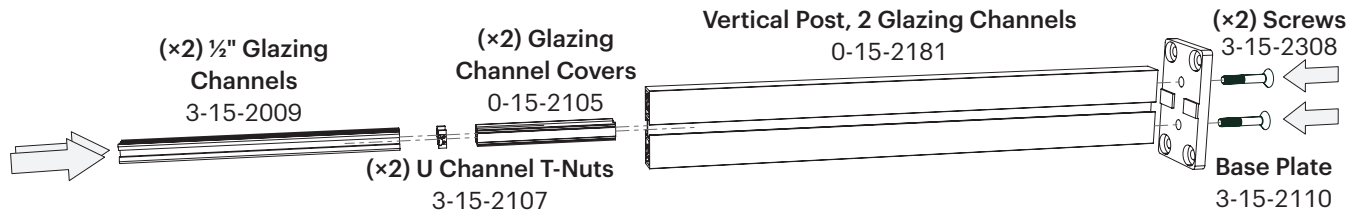


- c** Secure U Channel T-Nuts. (×6)

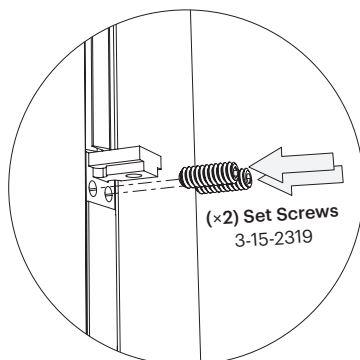

Installation


3 Secure First Vertical Post to Floor

Use hammer drill to secure post.

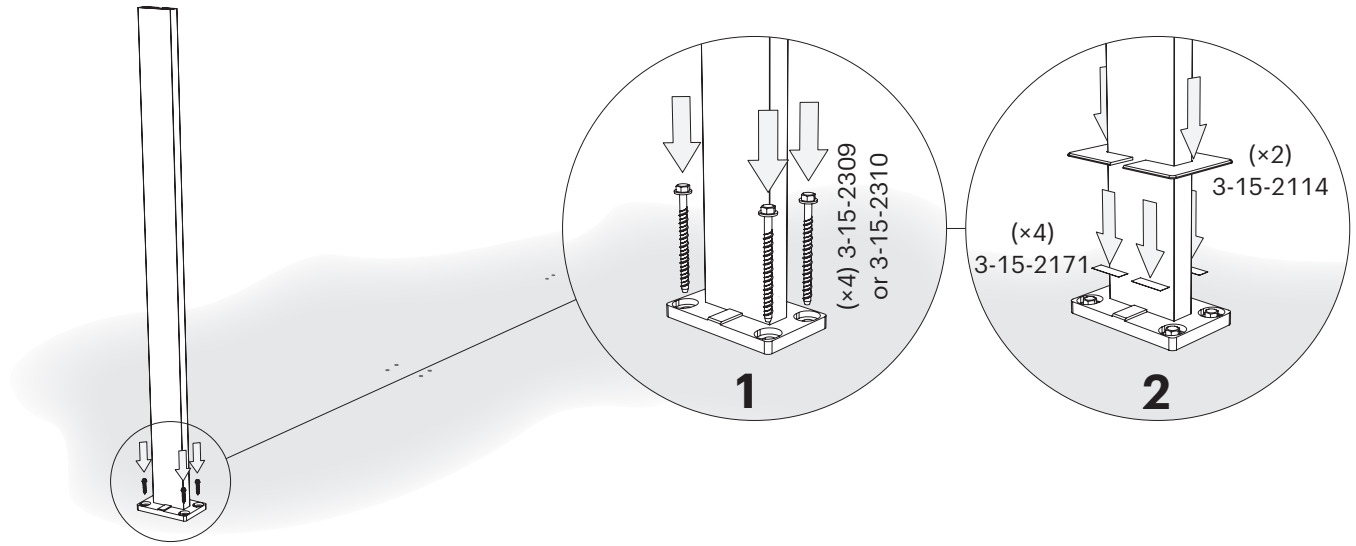


4 Attach U Channel to First Vertical Post

a

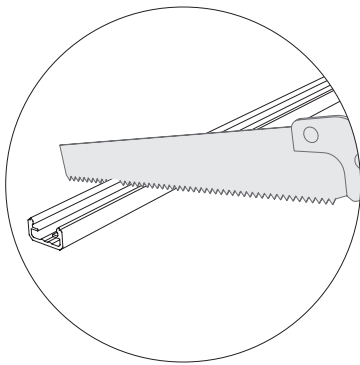


Cut Glazing Channel (0-15-2125) to 3'9.25" length.

b

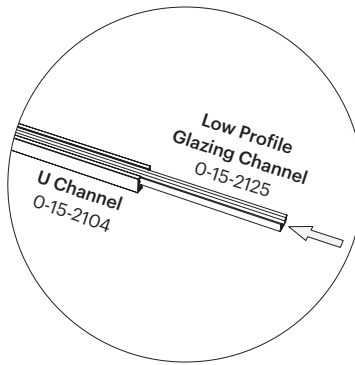

Insert Glazing Channel (0-15-2125) into U Channel (0-15-2104).


c

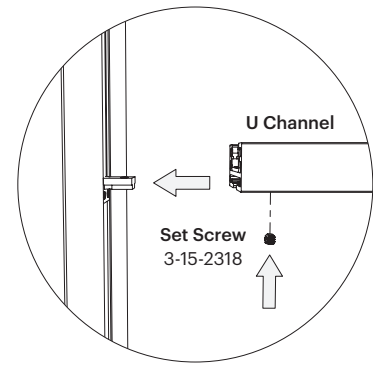


Secure U Channel (0-15-2104) to Vertical Post.

Installation

5 Install Varia Panel

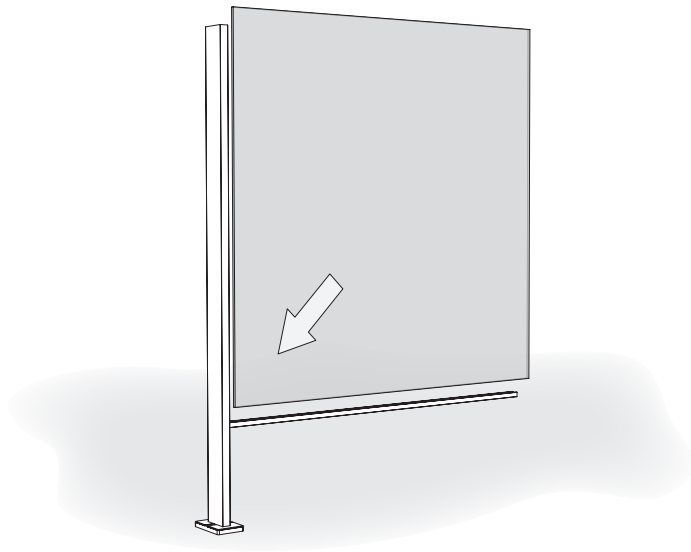


6 Install Second Vertical Post

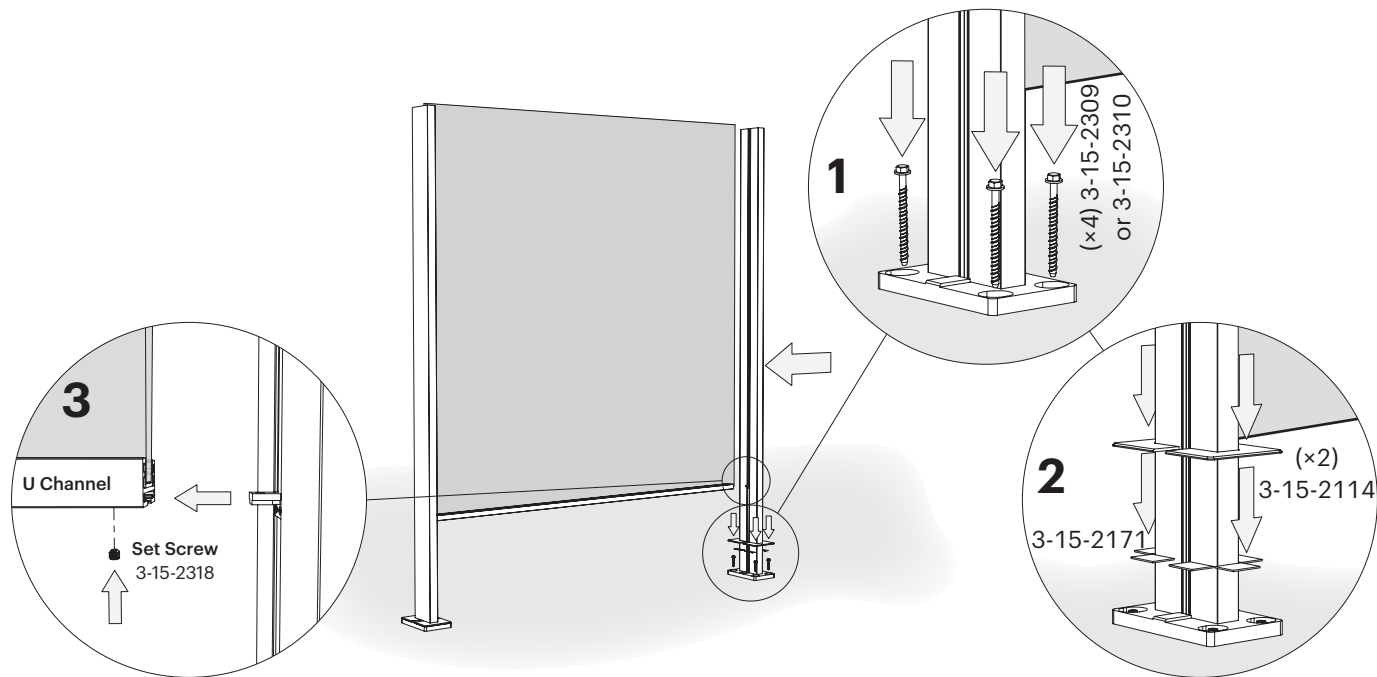



Installation

7 Assemble and Attach U Channel Mitered Corner


- a** Assemble U Channel Mitered Corner Kit (3-15-2180-K).

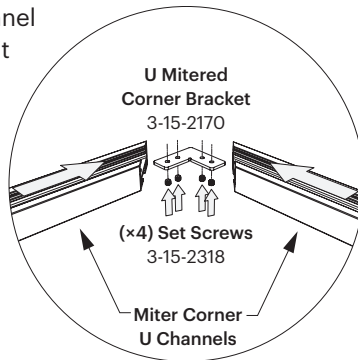


- b** Cut Glazing Channel (0-15-2125) to 9" length. (×2)

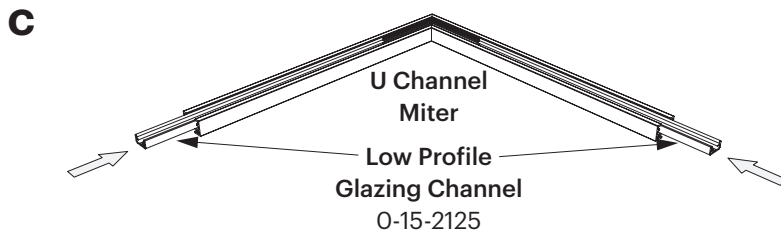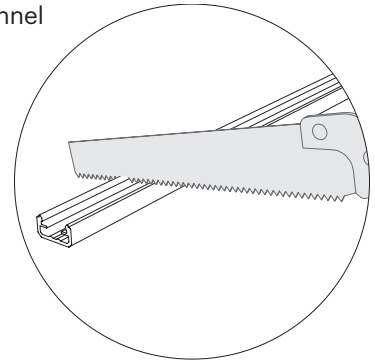

- d** Secure U Channel (0-15-2104) to Vertical Post.

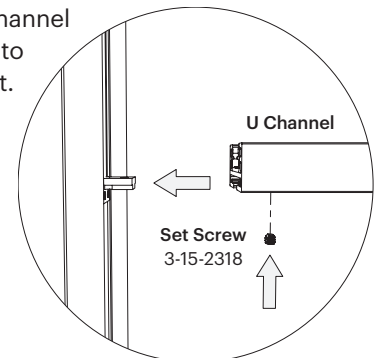

8 Install Varia Corner Panel

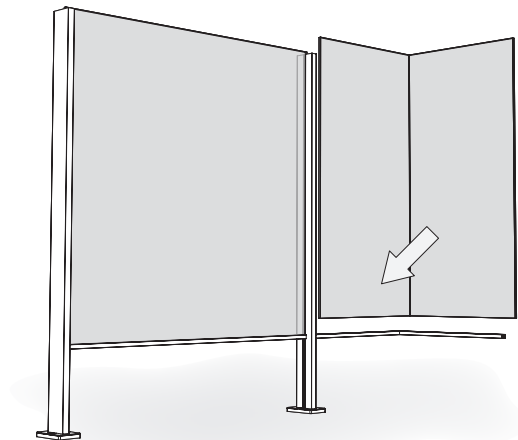


9 Install Remaining Posts, U Channel and Panel

Repeat Step 6 for next Vertical Post and then Steps 4-6 for remaining U Channel, Varia Panel and Vertical Post.


Installation

10 Install Adapter Plates on Posts

- a** Install Adapter Plates on Vertical Posts with 1 Glazing Channel. (×2)

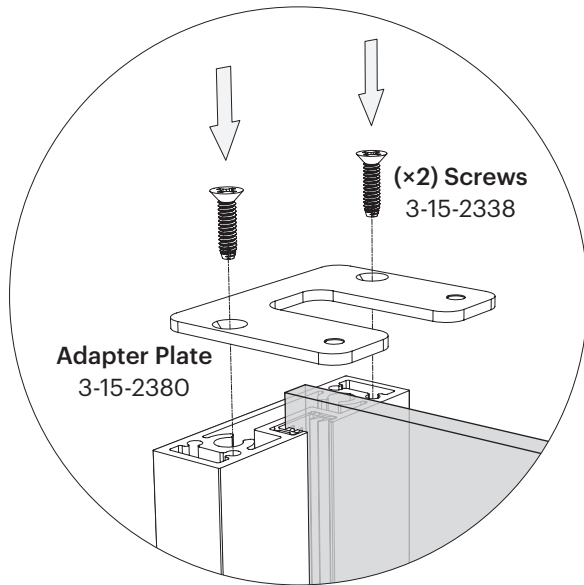


- b** Install Adapter Plates on Vertical Posts with 2 Glazing Channels. (×2)

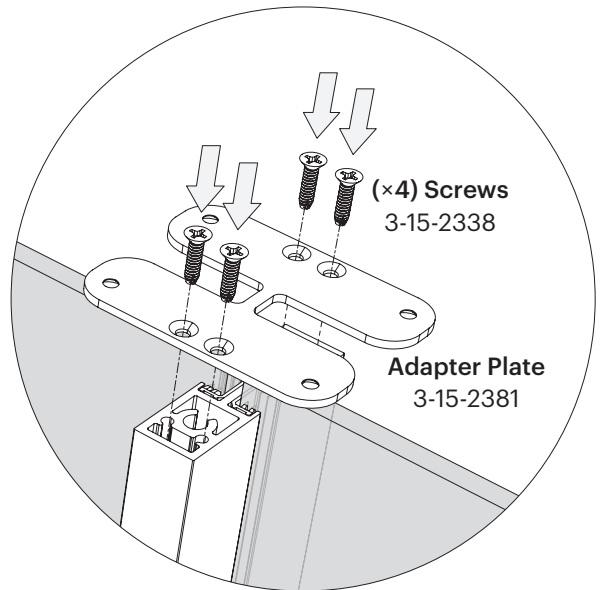

11 Assemble Aluminum Top Rail Sections


- a** Cut Glazing Channel (0-15-2369) to the lengths of each Top Rail (3-15-2377).

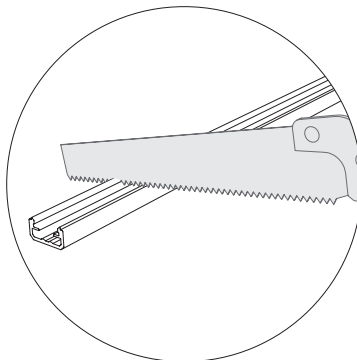

Installation

11 Assemble Aluminum Top Rail Sections *cont...*


- b** Assemble using Mitered Corner KIT (3-15-2384-K) and Miter A and Miter B Top Rails (3-15-2377).

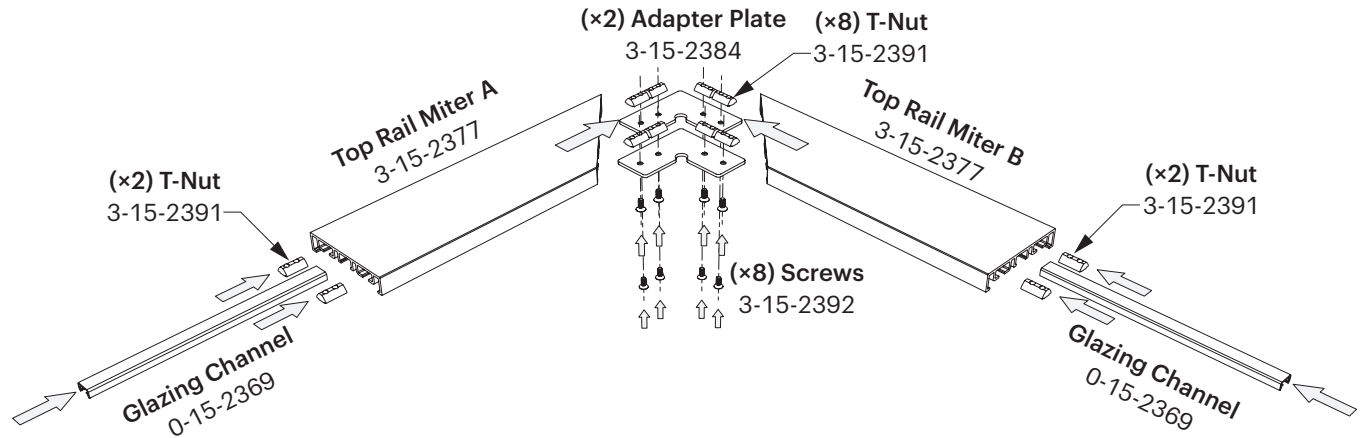


12 Attach Half Wall Top Rails

- a** Lay out to ensure overhang at ends prior to install.

- b** Attach Top Rails with screws (3-15-2392).

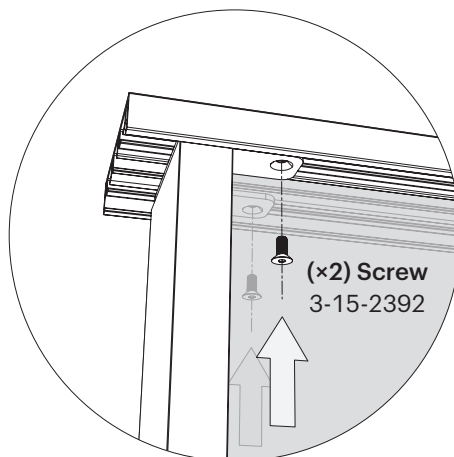

Connection at Vertical Post with 1
Glazing Channel (x2)

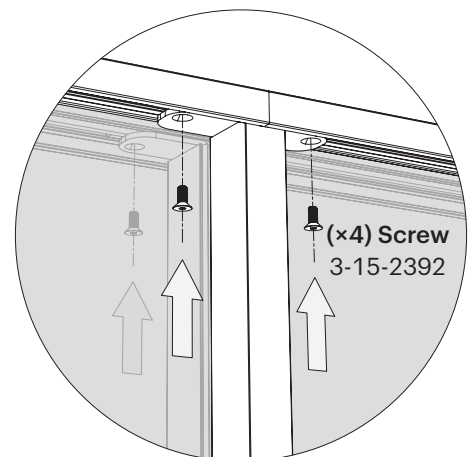


Connection at Vertical Post with 2
Glazing Channels (x2)


Installation

13 Attach End Caps (×2)

a

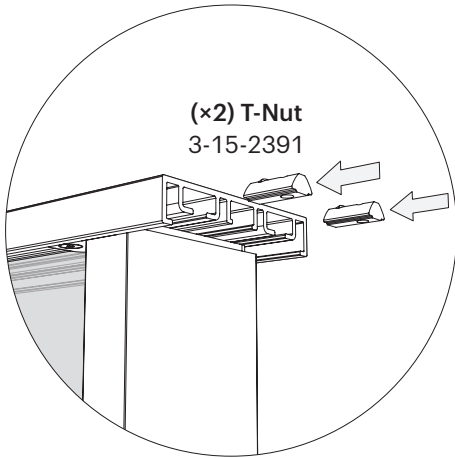


b

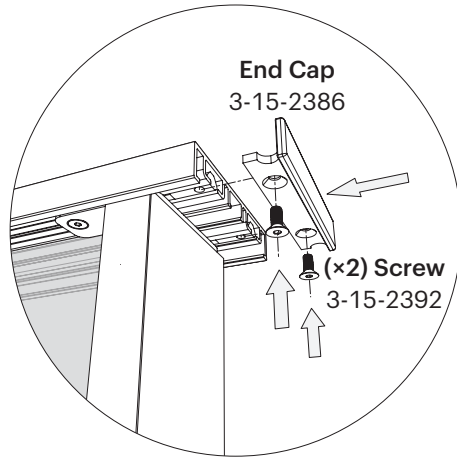

14 Insert Slot Covers (×8)

a Cut Top Rail Slot Covers (3-15-1732) to 3'3.5" lengths (×4), 8.375" lengths (×2), 6.125" lengths (×2).

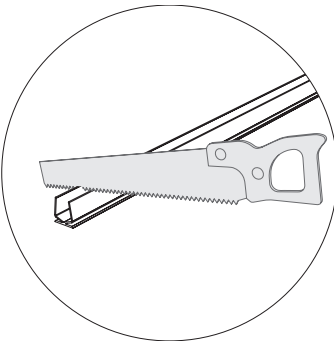

b Insert Slot Covers (3-15-1732) into slots on bottom side of Top Rails.

