
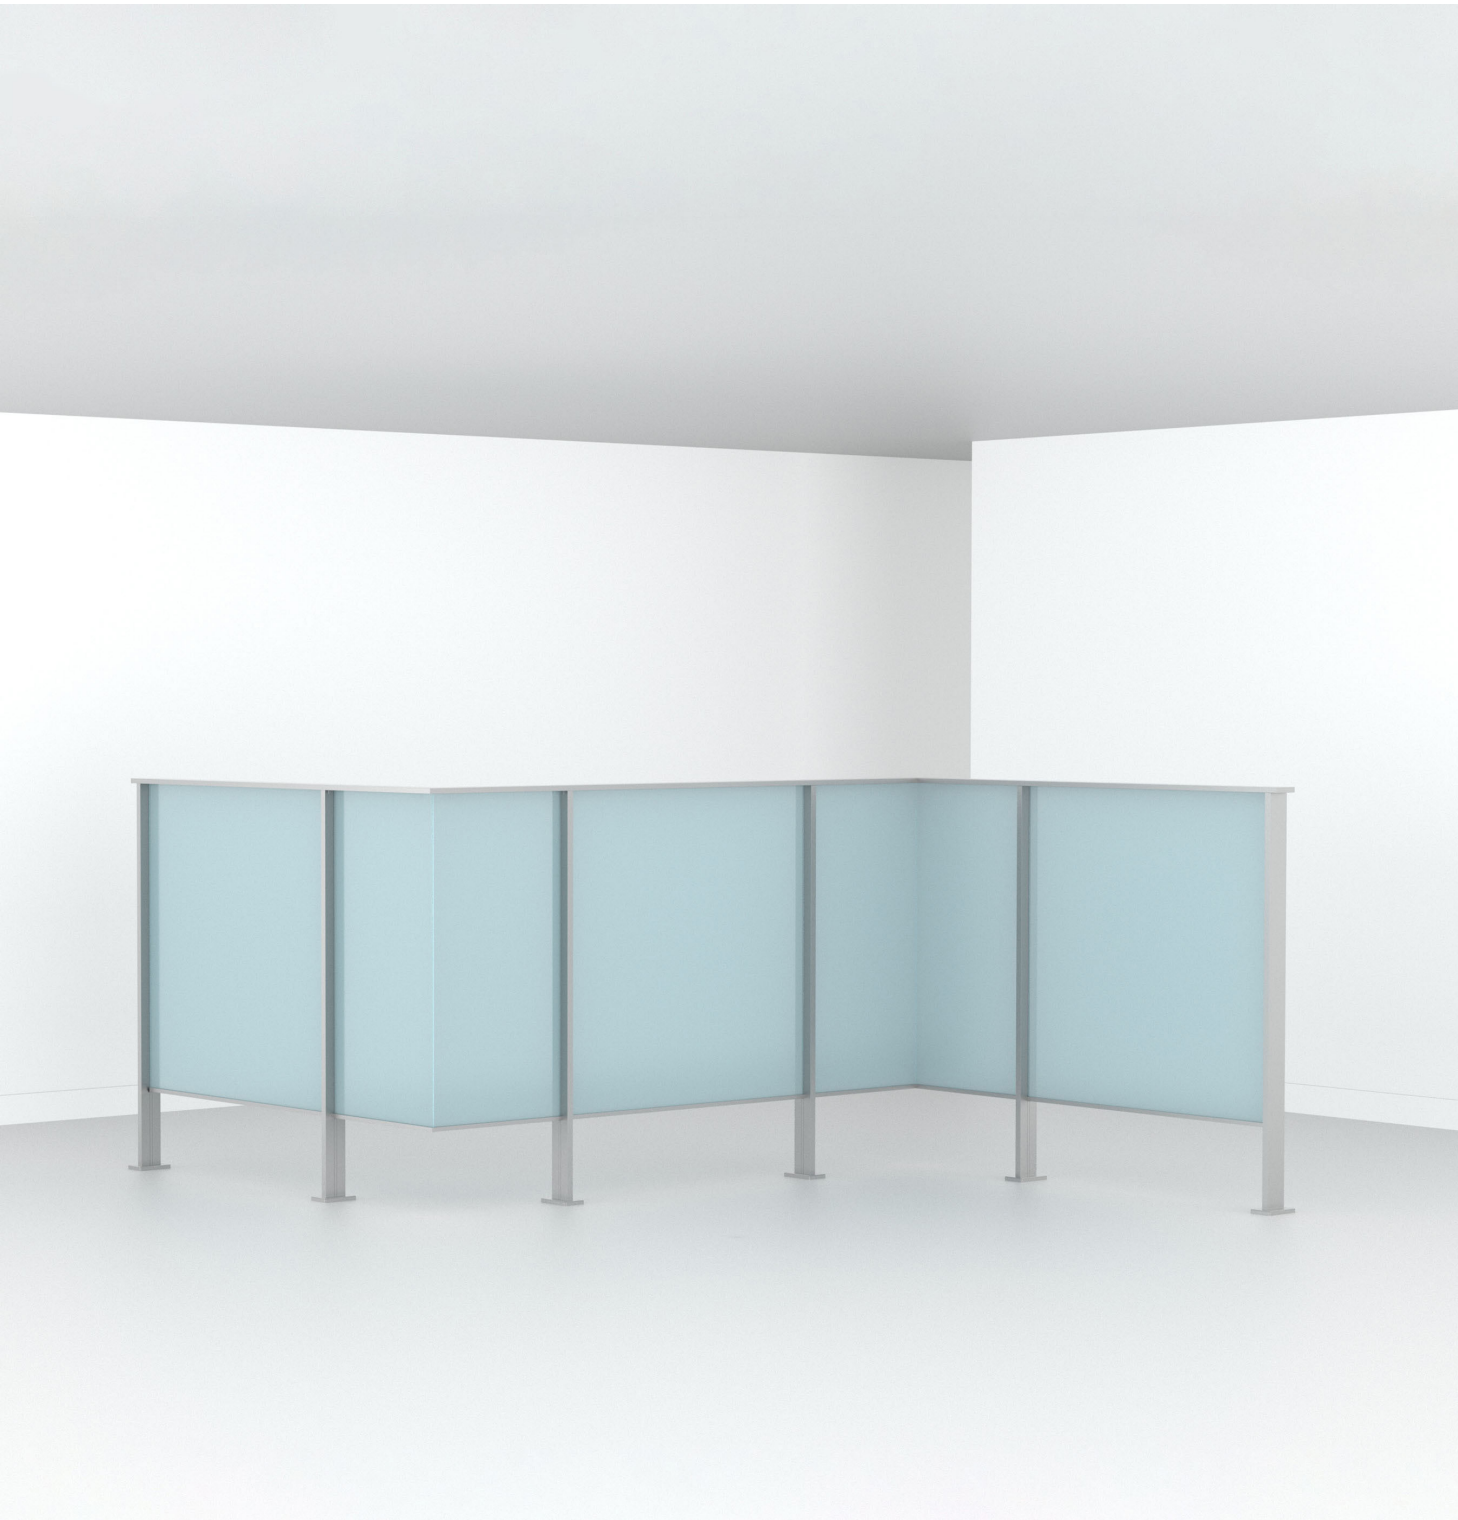
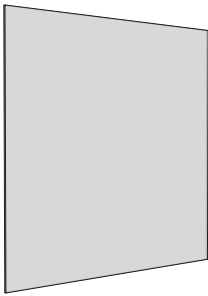
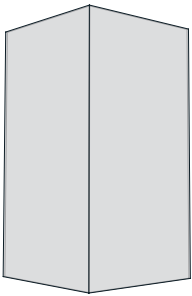
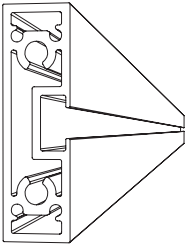
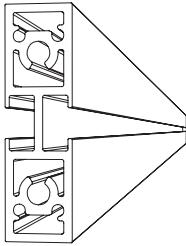
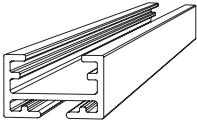


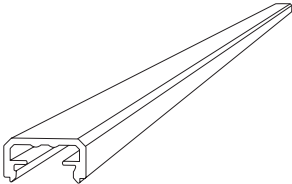
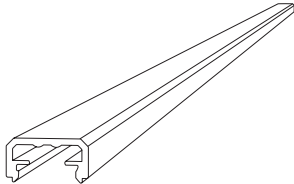
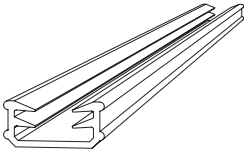
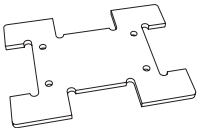



Divide
SimpleSpec 200.105™

Installation
Manual

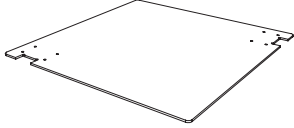


Contents Overview

(×3)  3/8" Varia Panel	(×2)  3/8" Corner Varia Panel	(×2)  Vertical Post, 1 Glazing Channel 0-15-2182	(×4)  Vertical Post, 2 Glazing Channels 0-15-2180
(×3)  U Channel 0-15-2104	(×3)  Half Wall Aluminum Top Rail 3-15-2377	(×2)  Glazing Channel Cover 0-15-2105	(×6)  Half Wall Aluminum Top Rail Slot Cover 3-15-1732
(×3)  Low Profile Glazing Channel, 47" 0-15-2125	(×3)  Low Profile Glazing Channel, 96" 0-15-2369	(×5)  1/2" Glazing Channel 3-15-2009	
(×2)  Installation Template Baseplate Guide 3-15-2160	(×3)  Installation Template Spacer Guide 3-15-2347	(×2)  Installation Template Corner Guide 3-15-2182	

Contents Overview

(×10)

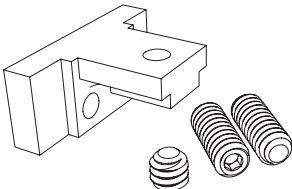


U Channel Attachment KIT
3-15-2107-K

=

(×10)	+	(×20)	+	(×10)
U Channel T-Nut 3-15-2107		Set Screw 6-32 x 3/8" 3-15-2319		Set Screw 6-32 x 1/8" 3-15-2318

(×6)

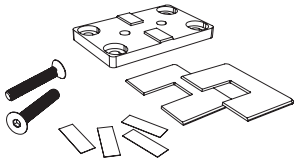

Baseplate KIT
3-15-2110-K

=

(×6)	+	(×12)	+	(×12)	+	(×24)
Baseplate 3-15-2110		Baseplate Cover 3-15-2114		Screw 3-15-2308		VHB Tape Strip 3-15-2416

(×6)




**Baseplate Universal
Anchoring KIT**
3-15-2119-K

=

(×24)	+	(×24)
M8x105 Concrete Lag Screw 3-15-2309		Hex Head Wood Lag Screw 3-15-2310

(×2)

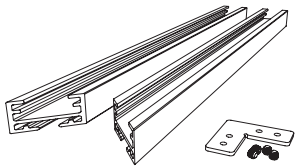


**U Channel Mitered
Corner KIT**
3-15-2180-K

=

(×2)	+	(×2)	+	(×2)	+	(×8)
U Channel Corner Miter A Length 3-15-2180		U Channel Corner Miter B Length 3-15-2181		U Mitered Corner Bracket 3-15-2170		Set Screw 6-32 x 1/8" 3-15-2318


Contents Overview

(×2)

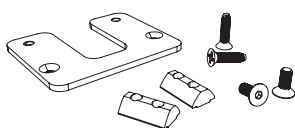

Half Wall Aluminum Top Rail, End Adapter Plate KIT
3-15-2380-K

=



(×2)

Half Wall Aluminum Top Rail, End Adapter Plate
3-15-2380

+



(×4)

M5 T-Nut
3-15-2391

+



(×4)

M5 × 12mm Screw
3-15-2392


+



(×4)


Self Tapping Screw
3-15-2338

(×4)

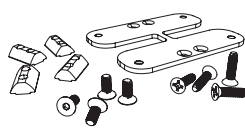

Half Wall Aluminum Top Rail, Center Adapter Plate KIT
3-15-2381-K


=



(×4)

Half Wall Aluminum Top Rail, Center Adapter Plate
3-15-2381

+



(×16)

M5 T-Nut
3-15-2391

+



(×16)

M5 × 12mm Screw
3-15-2392


+



(×16)


Self Tapping Screw
3-15-2338

(×2)

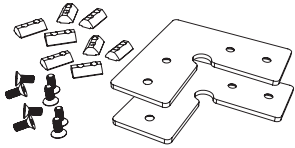

Half Wall Aluminum Mitered Corner KIT
3-15-2384-K


=



(×4)

Half Wall Aluminum Mitered Corner
3-15-2384

+



(×16)

M5 T-Nut
3-15-2391


+



(×16)


M5 × 12mm Screw
3-15-2392

(×2)

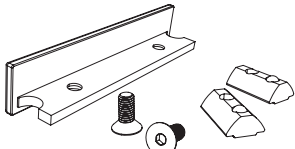

Half Wall Aluminum End Cap KIT
3-15-2386-K

=



(×2)

Half Wall Aluminum End Cap
3-15-2305

+



(×4)

M5 T-Nut
3-15-2391


+



(×4)

M5 × 12mm Screw
3-15-2392

Overview - Divide Partition Flex

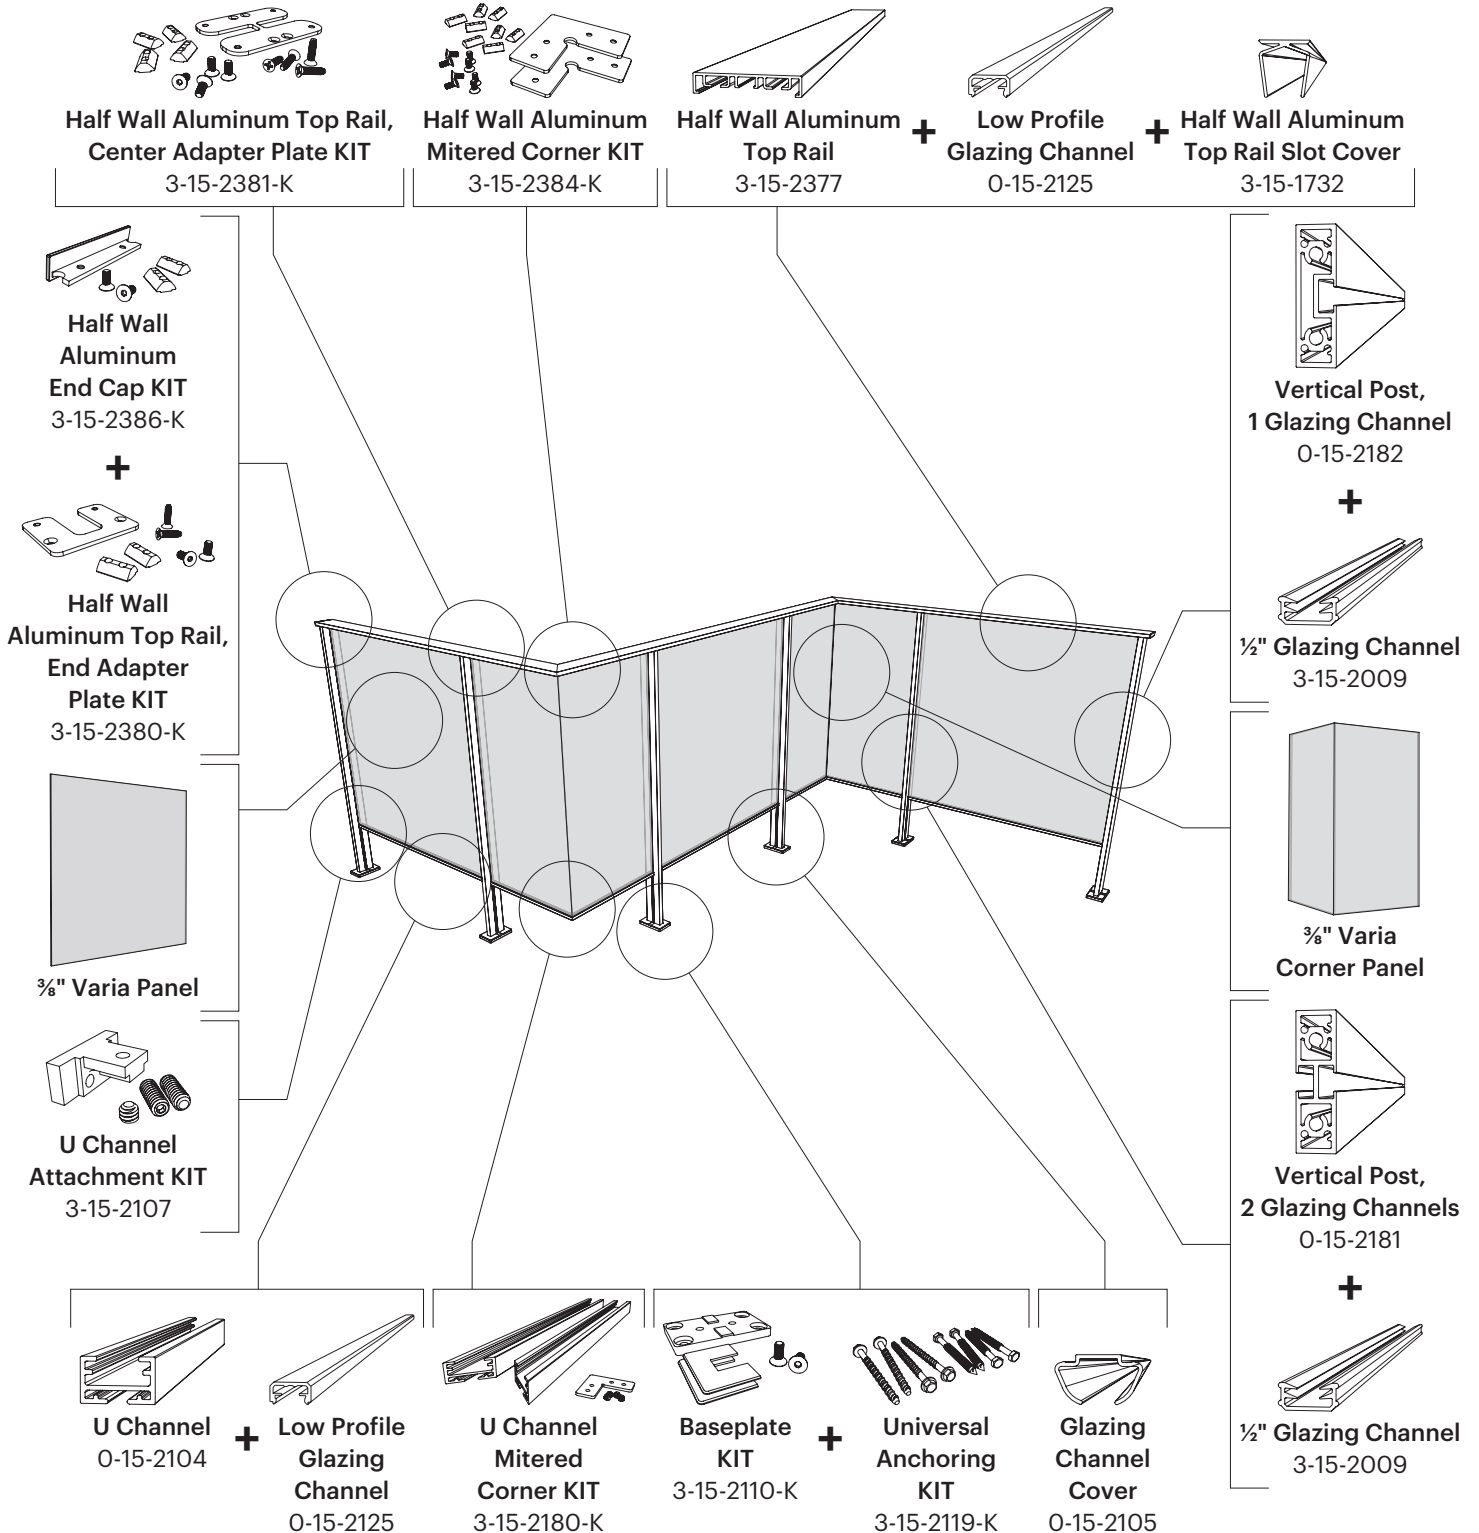


Overview - Accessory Options


Divide Partition Systems also accommodate a number of accessory options to customize the use for your application. Contact your 3form Elements Dealer for additional information.

Markerboard and Markerboard Shelf


Post to Post

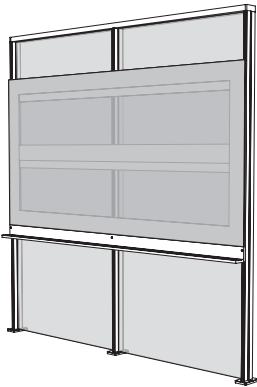


Inset on Hush Mount

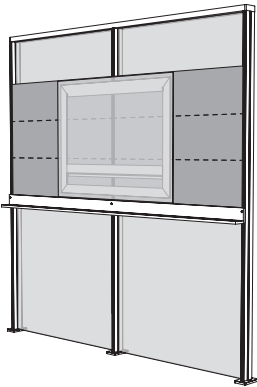


Accessory Shelf

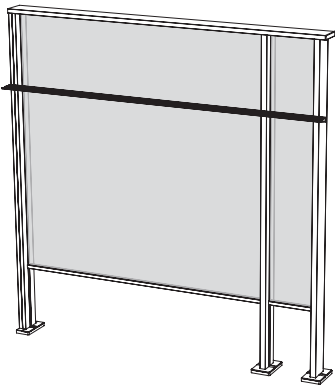

Hush Mount

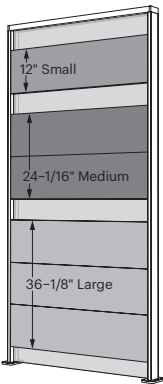


TV Mount

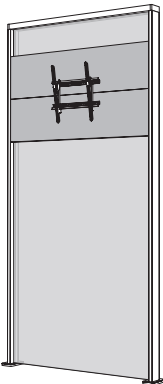


Coat Hook


Post Attachment




Hush Mount Attachment

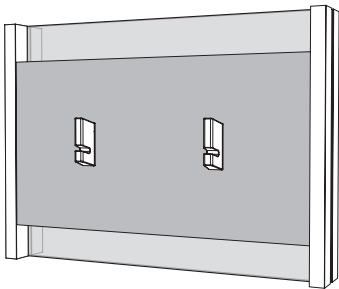

Hush Bar

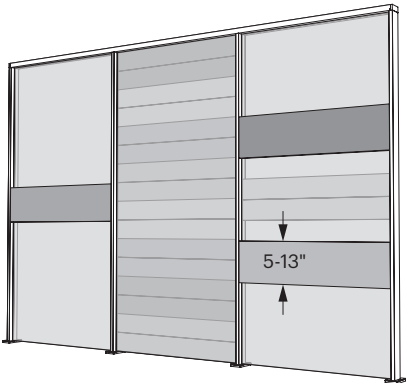


Shelves and Shelving Bracket

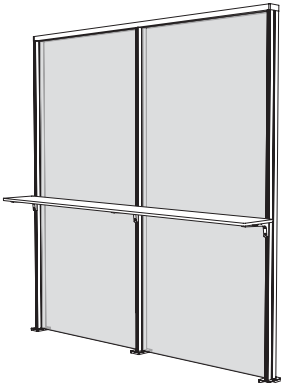

Installation


Required Tools

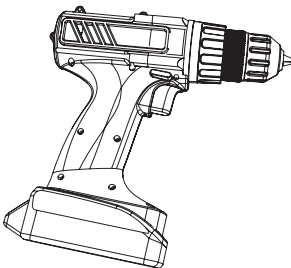


Drill




Drill Bits

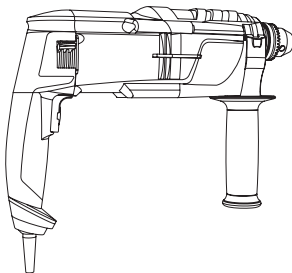

Hammer Drill

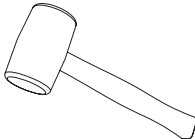


Rubber Mallet

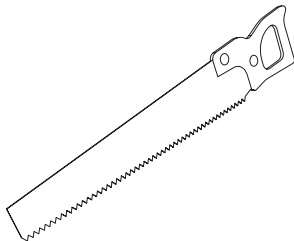

Saw

1 Drill Pilot Holes (×24)

- a** Baseplate templates (3-15-2160) and corner templates (3-15-2182) will be provided. The baseplate template has hole locations for drilling. Spacers will also be provided, unique to this configuration; cut to size based off post dimensions in the quoting phase.

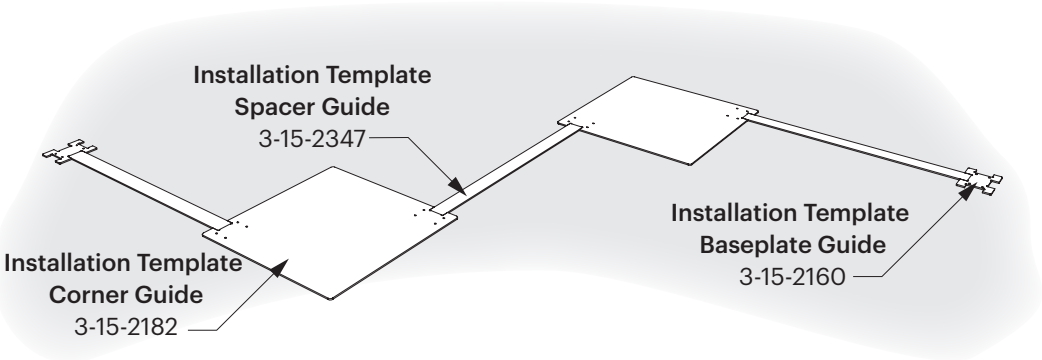

- b** Following the Installation Template, drill pilot holes. Use appropriate pilot hole diameter and depth for the type of substrate you are fastening to.


**3form stocks the drill bits required for the concrete and wood pilot holes. If you wish to purchase a drill bit, please contact your 3form sales representative.*

Substrate	Ø	Drill Bit	Depth	Anchors
Concrete	8mm	3-15-2350	min 4.3"	3-15-2309
Wood	3/16"	3-15-2335	min 3.5"	3-15-2310


Installation

2 Assemble Vertical Posts


- a** Cut Glazing Channel (3-15-2009) to 3' 11.125" lengths. (×10)

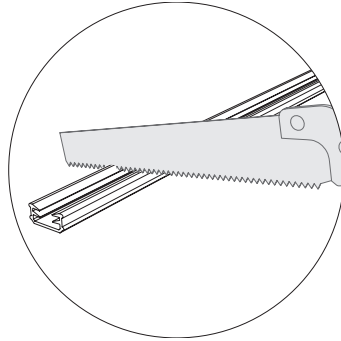


- Cut Glazing Slot Cover (0-15-2105) to 11.375" lengths. (×10)

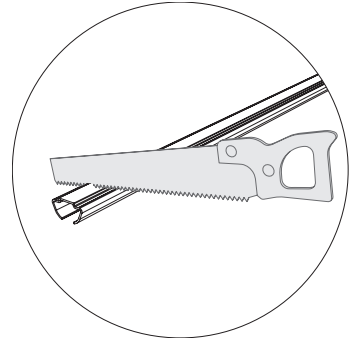


- b** Assemble Vertical Posts (0-15-2182). (×2)

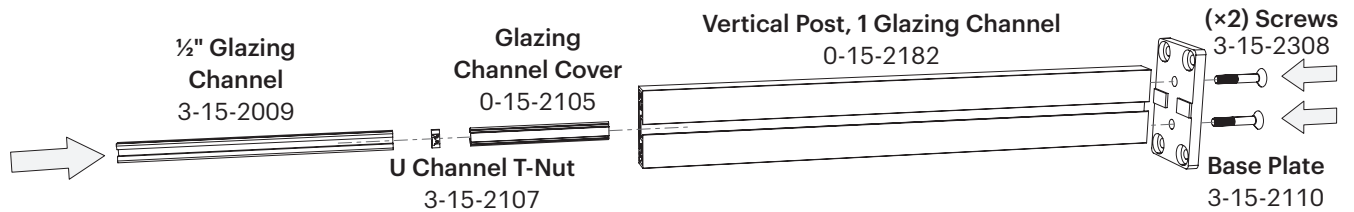

Assemble Vertical Post (0-15-2181). (×4)

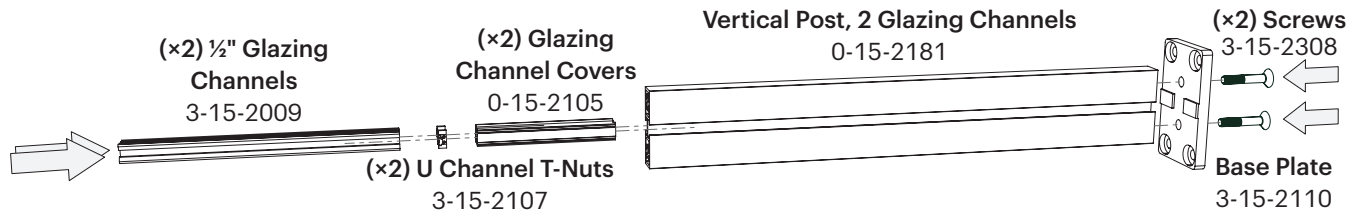


- c** Secure U Channel T-Nuts. (×10)

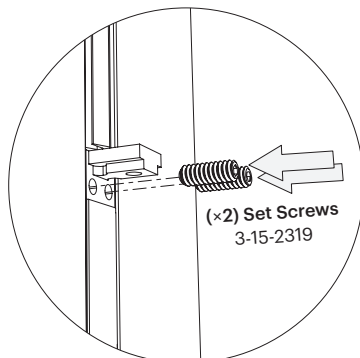

Installation


3 Secure First Vertical Post to Floor

Use hammer drill to secure post.

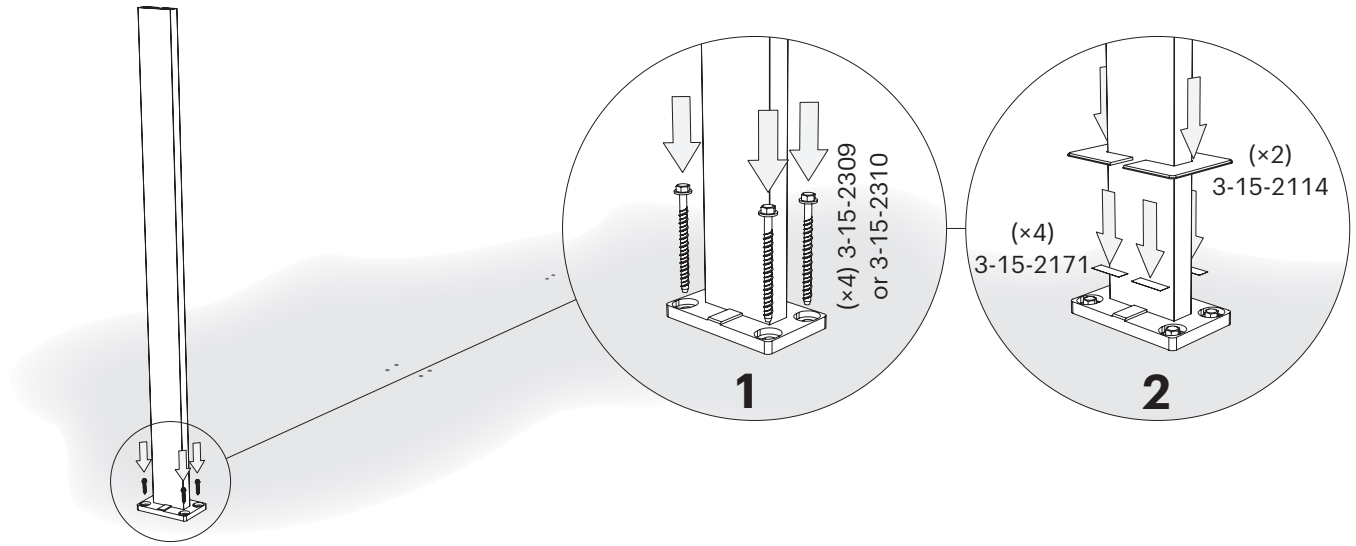


4 Attach U Channel to First Vertical Post

a

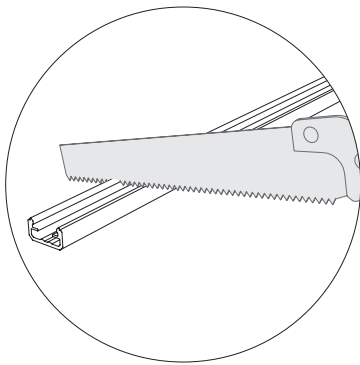


Cut Glazing Channel (0-15-2125) to 3'6.5" lengths (x2) and 3'5.375" length (x1).

b

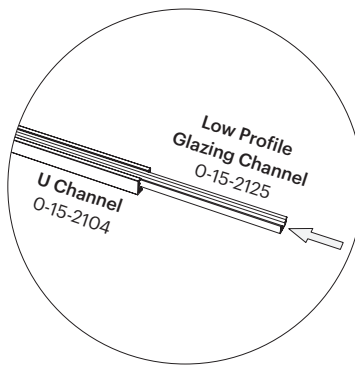

Insert Glazing Channel (0-15-2125) into U Channel (0-15-2104).


c

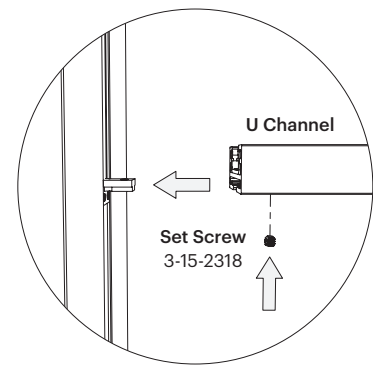


Secure U Channel (0-15-2104) to Vertical Post.

Installation

5 Install Varia Panel

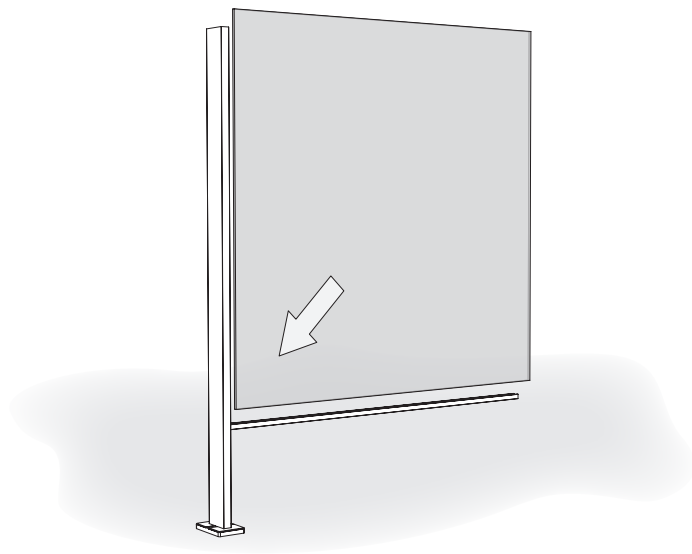


6 Install Second Vertical Post

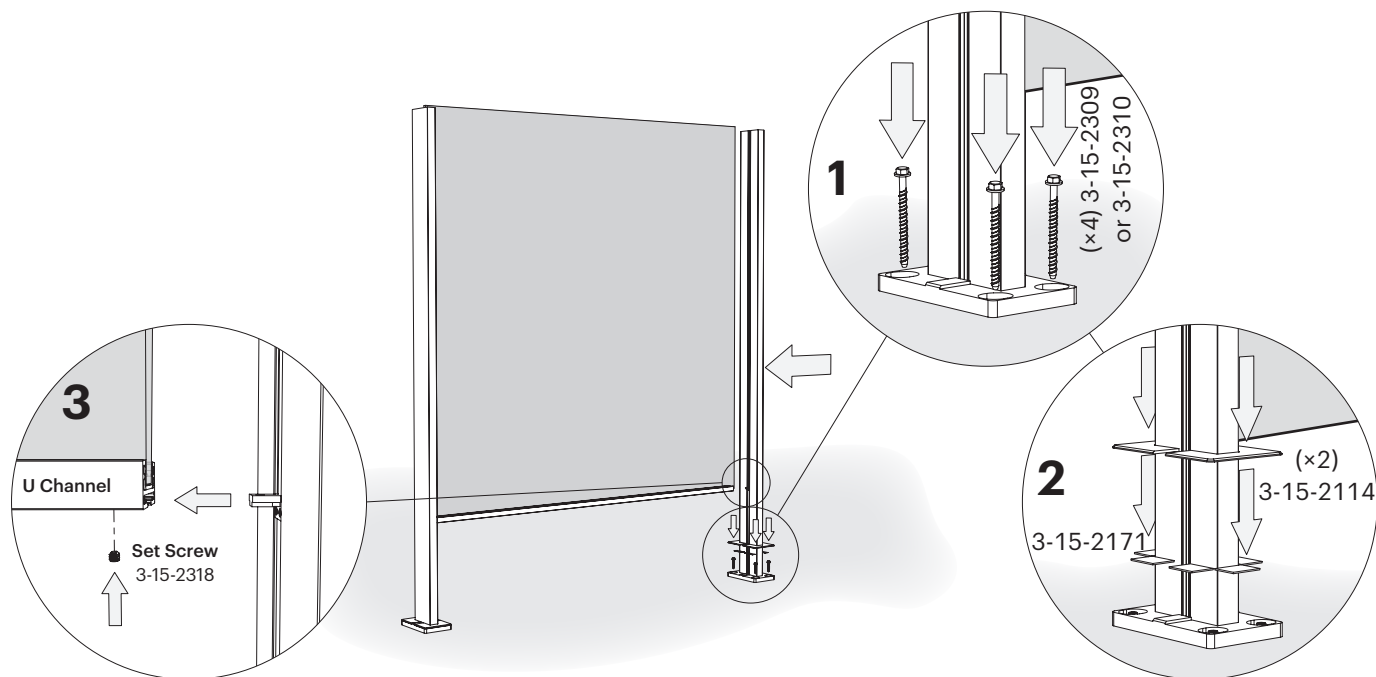



Installation

7 Assemble and Attach U Channel Mitered Corner


- a** Assemble U Channel Mitered Corner Kit (3-15-2180-K).

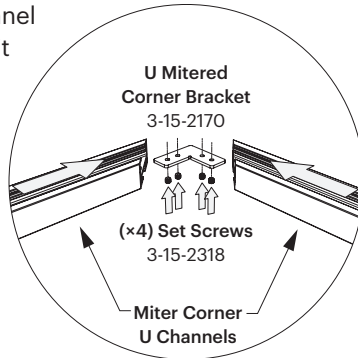


- b** Cut Glazing Channel (0-15-2125) to 9" length. (×4)

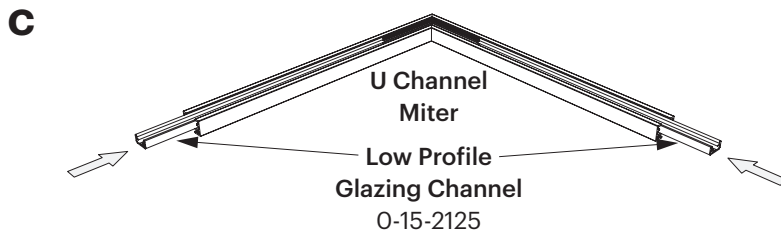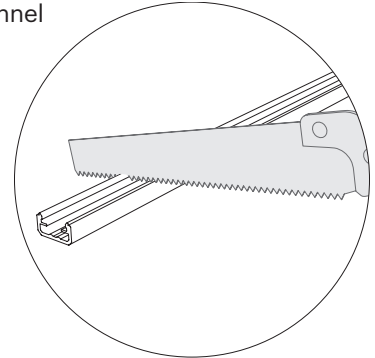

- d** Secure U Channel (0-15-2104) to Vertical Post.

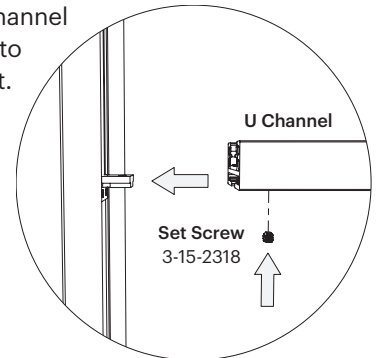

8 Install Varia Corner Panel

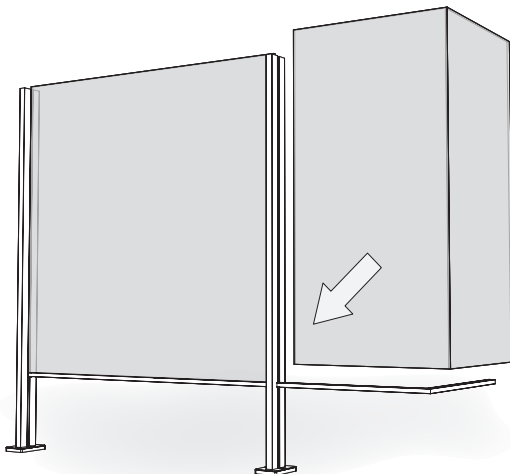


9 Install Remaining Posts, U Channels and Panels

Follow Steps 4-8 for remaining Vertical Posts, U Channels, Varia Panels and Mitered Corner.


Installation

10 Install Adapter Plates on Posts

- a** Install Adapter Plates on Vertical Posts with 1 Glazing Channel. (×2)

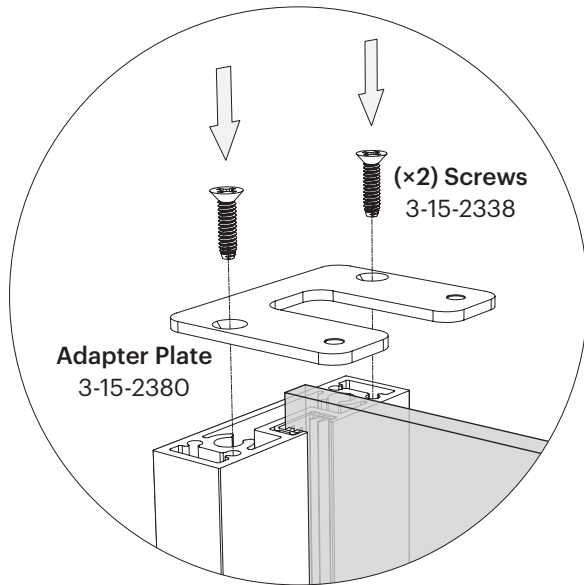


- b** Install Adapter Plates on Vertical Posts with 2 Glazing Channels. (×4)

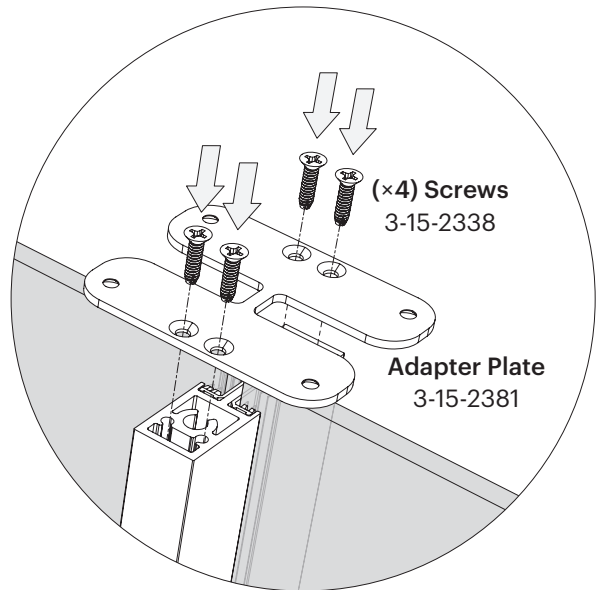

11 Assemble Aluminum Top Rail Sections


- a** Cut Glazing Channel (0-15-2369) to the lengths of each Top Rail (3-15-2377).

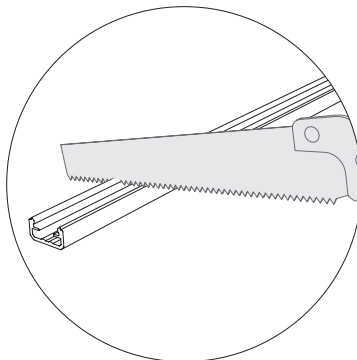


Installation

11 Assemble Aluminum Top Rail Sections *cont...*

b Assemble 3 Mitered Top Rails (3-15-2377).

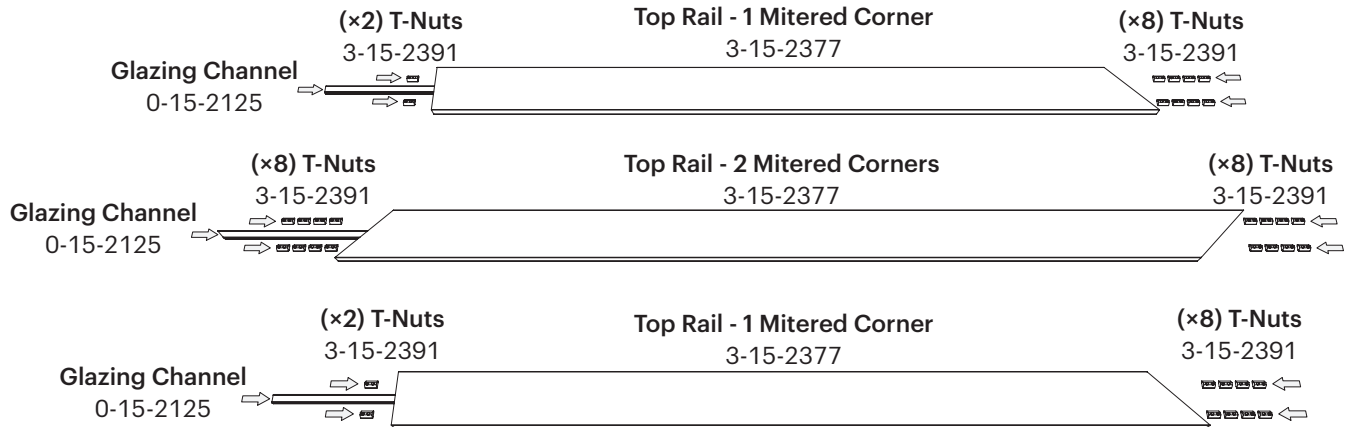

C Connect 3 Mitered Top Rails (3-15-2377).

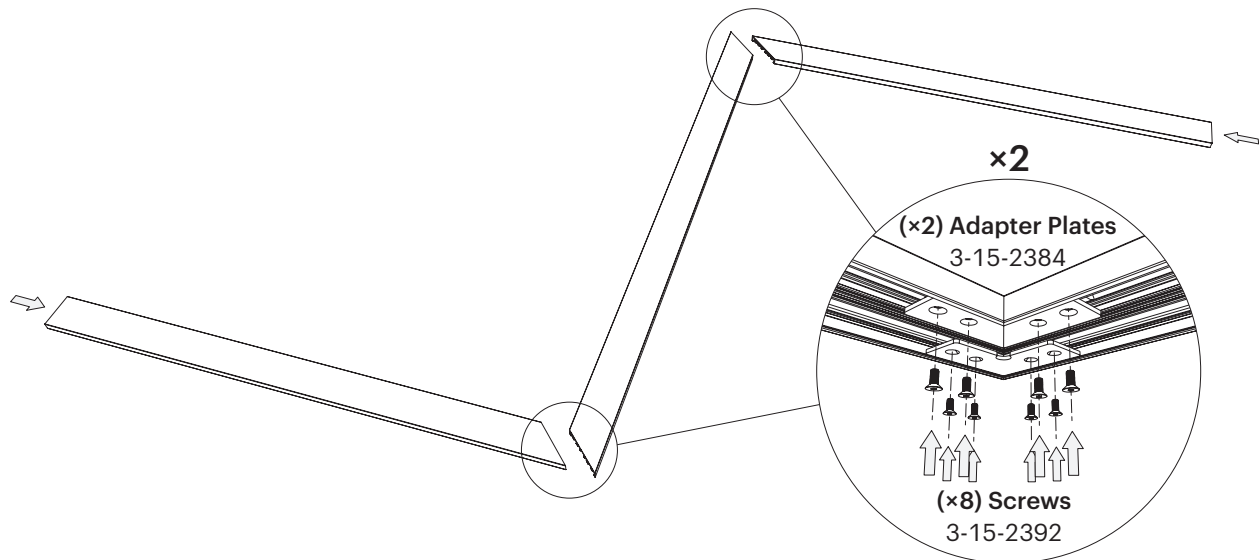


Installation


12 Attach Half Wall Top Rails

a Lay out to ensure overhang at ends prior to install.

b Attach Top Rails with screws (3-15-2392).


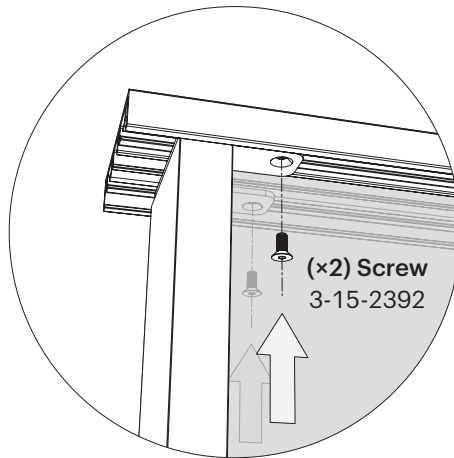


Connection at Vertical Post with 1
Glazing Channel (×2)

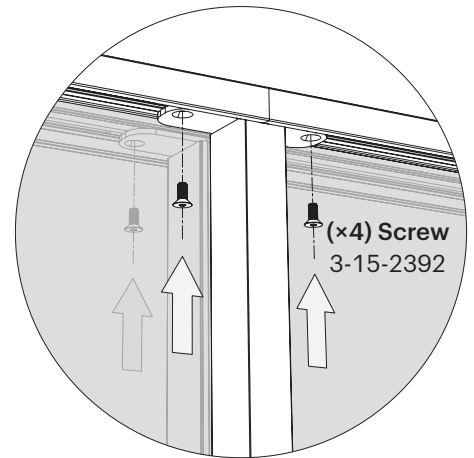

Connection at Vertical Post with 2
Glazing Channels (×4)


13 Attach End Caps (×2)

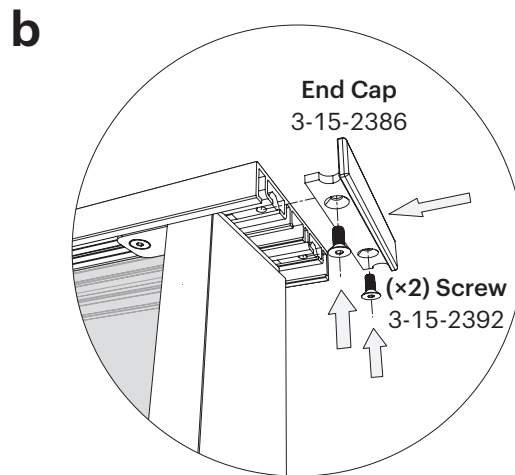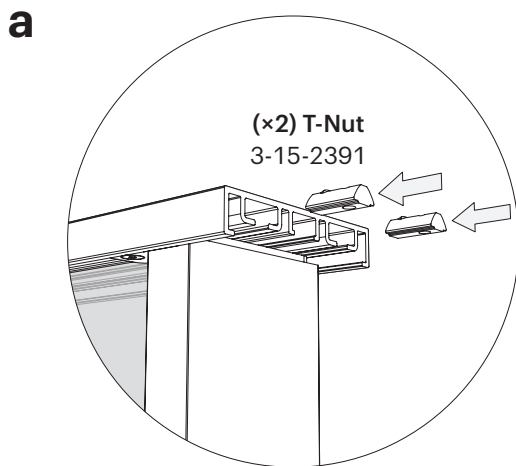

Installation

14 Insert Slot Covers (×14)

- a** Cut Top Rail Slot Covers (3-15-1732) to 3'3.5" lengths (×4),
3'2.375" lengths (×2)
8.375" lengths (×4),
6.125" lengths (×4).

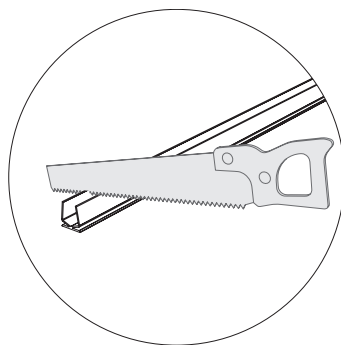

- b** Insert Slot Covers (3-15-1732) into slots on bottom side of Top Rails.

